


Onan

RV

GenSet™ Parts Manual

BGM

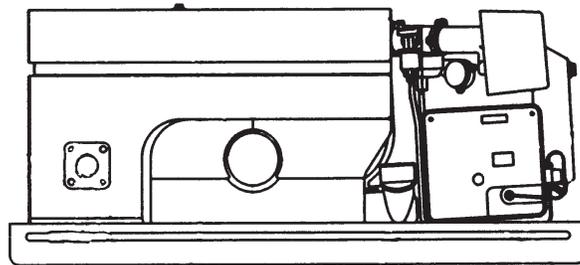

Printed in U.S.A.

965-0267
9-98 (Spec A-H)
Replaces 7-97 (Spec A-G)

MODEL IDENTIFICATION

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Onan nameplate.

For handy reference, insert your nameplate information in the spaces below.

MODEL AND SPEC NO.

SERIAL NO.

DIGITAL CONTROL SOFTWARE VERSION
AND DATE (IF APPLICABLE)

SAFETY PRECAUTIONS

The following symbols are used in Onan manuals to alert users to the potentially dangerous conditions relating to maintenance of equipment and replacement of parts. Please read and observe.



This symbol warns of immediate hazards which will result in severe personal injury or death.



This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



This symbol refers to a hazard or unsafe practice which can result in severe personal injury or product or property damage.

PRODUCT SAFETY PRECAUTIONS



Service and repair of Onan equipment must be performed by trained, experienced personnel only. Improper service or repair may result in property damage, severe personal injury or death. Do not use this catalog as a guide to servicing your equipment. Read and follow the IMPORTANT SAFETY INSTRUCTIONS in the Service Manual appropriate for the equipment you are working on.



Contact with USED ENGINE OILS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking or changing engine oils take all necessary precautions not to ingest, breathe the fumes or contact the used oil.



Contact with ASBESTOS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When handling engine gaskets take all necessary precautions not to ingest, breathe or contact the dust from the gaskets! Use adequate ventilation and wear protective gloves, masks and clothing!



Contact with BENZINE and LEAD, found in gasoline, fuel additives and solvents has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking, draining or adding gasoline and fuel additives or using solvents take all necessary precautions not to ingest, breathe the fumes or contact the liquids. Use adequate ventilation and wear protective gloves, masks and protective clothing!

Introduction

This manual applies to the standard Recreational Vehicle Generator Set as listed in the Generator Set Data Table. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding to the same reference number in the parts list. Parts illustrations are typical. Using the model and specification number from your generator set nameplate, select parts that apply to your set. Right and left sides are determined by facing the engine end (front) of the set.

Generator Set Data Table

MODEL**	ELECTRICAL DATA				
	WATTS	VOLTS	HERTZ	WIRE	PHASE
5BGM-FA/*	5000	120	60	2	1
5.5BGM-FA/	5500	120	60	2	1

* – The diagonal line (/) in the model and specification number separates generator set characteristics from the specification number and letter. The specification number denotes customer requested options of deviations from a standard (26105A) model. The specification letter advances (A to B, B to C, etc.) with major manufacturing changes.

** – See Back of Book for W/D Information.

Index

Actuator, Governor, **17**
Adapter, Air Cleaner, **19**
Adapter, Generator, **27**
Adapter, Oil Drain, **26**
Adapter, Oil Fill Tube, **25**
Adapter, Oil Filter, **23**
Adapter, Preheater, **19**

Backplate, Air Housing, **33**
Baffle, Breather Valve, **7**
Ball, Gearcase Bearing, **14**
Ball, Governor, **10**
Base, Oil, **24**
Bearing, Camshaft, **9**
Bearing, Crankshaft, **7, 9**
Bearing, Generator Rotor Ball, **37**
Bearing, Governor Shaft Needle, **14**
Block, Cylinder, **7, 9**
Block, Generator Brush, **37**
Block, Terminal, **39**
Board, PC, **39**
Bracket, Cable Adjust, **16**
Bracket, Choke Mounting, **19**
Bracket, Diaphragm Mounting, **19**
Bracket, Fuel Pump, **31**
Bracket, Fuse Holder, **39**
Bracket, Governor, **16**
Bracket, Ignition Coil, **27**
Bracket, Ignition Control, **27**
Bracket, Oil Fill Tube Support, **25**
Bracket, Relay, **39**
Bracket, Resistor Mounting, **22**
Bracket, Voltage Regulator, **39**
Breaker, Circuit, **39**
Brush, Generator, **37**
Bushing, Fuel Tank Reducer, **35**
Bushing, Isolator, **31**

Cable, Governor Flexible Adjust, **16**
Cable, Spark Plug, **27**
Cable, Starter, **21**
Camshaft (Begin Spec B), **11**
Camshaft (Spec A), **10**
Cap, Air Inlet Rod Vinyl, **19**
Cap, Intake/Exhaust Valve, **7**
Cap, Oil Fill, **24**
Cap, Starter Drive, **21**
Capacitor, **27**
Carburetor, **19**
Clip, Air Housing Moulding, **33**
Clip, Choke Housing Tube Retaining, **19**
Clip, Control Rod Retaining, **16**
Clip, Diaphragm Mounting "U", **19**
Clip, Fuel Line Retainer, **31**
Clip, Fuse, **39**
Clip, Preheater Hose, **19**
Clip, Spark Plug Wire, **33**
Clip, Throttle Rod, **17**

Coil, Ignition, **27**
Components, Carburetor, **20**
Connector, Conduit, **37**
Connector, Fuel Tank Barbed Hose, **35**
Connector, Hose, **19**
Control, **39**
Control, Ignition, **27**
Controller, Governor, **31**
Coupling, Fuel Tank Hose, **35**
Cover, Air Housing Cylinder, **33**
Cover, Air Housing Top, **33**
Cover, Air Inlet, **19**
Cover, Breaker Box Opening, **7**
Cover, Brush Block Access, **37**
Cover, Choke, **19**
Cover, Choke Housing, **19**
Cover, Control, **39**
Cover, Governor Access, **33**
Cover, Switch, **39**
Cover, Tailpipe Access, **29**
Cover, Underfloor Housing Rear Panel, **34**
Cover, Valve, **7**
Crankshaft, **12**
Cup, Governor, **10**
Cup, Oil Pickup, **24**

Diaphragm, Pulloff, **19**
Diode, **43**
Drain, Oil Filter, **23**

Elbow, Carburetor, **19**
Elbow, Hose, **19**
Element, Air Cleaner, **19**
Element, Thermostat, **19**
Exhaust Options, **29**
Extension, Oil Drain, **26**

Fan, Generator, **37**
Filter, Breather Tube, **7**
Filter, Fuel, **19**
Filter, Oil, **23**
Fitting, Vacuum, **19**
Flange, Exhaust Manifold, **29**
Float Package, **20**
Fuse, Control Panel, **39**
Fuse, Engine Harness, **41**

Gasket, Air Horn, **19**
Gasket, Bearing Plate, **7**
Gasket, Breaker Box Opening, **7**
Gasket, Carburetor Mounting, **19**
Gasket, Cylinder Head, **7**
Gasket, Exhaust Manifold, **28**
Gasket, Gearcase (Begin Spec B), **15**
Gasket, Gearcase (Spec A), **14**
Gasket, Intake Manifold, **19**
Gasket, Oil Base, **24**
Gasket, Oil Drain Adapter, **26**

Index

- Gasket, Oil Filter Adapter, **23**
- Gasket, Side/Bottom Exhaust Tube, **28**
- Gasket, Valve Cover, **7**
- Gear, Camshaft (Begin Spec B), **11**
- Gear, Camshaft (Spec A), **10**
- Gear, Crankshaft, **12**
- Gearcase (Begin Spec B), **15**
- Gearcase (Spec A), **14**
- Generator, **37**
- Governor (Begin Spec B), **17**
- Governor (Spec A), **16**
- Grommet, Fuel Pump, **31**
- Grommet, Generator Stator Housing, **37**
- Grommet, Underfloor Housing, **34**
- Guide, Valve, **7**

- Hanger, Exhaust, **29**
- Harness, AC Output, **39**
- Harness, Adapter, **48, 49**
- Harness, Engine (Begin Spec B), **41**
- Harness, Engine (Spec A), **40**
- Harness, Fuel Pump, **39**
- Harness, Generator, **39**
- Harness, PC Board, **42**
- Harness, Remote (Begin Spec G), **48**
- Harness, Remote (Spec A–F), **44**
- Harness, Remote Panel (Switch Only) (Begin Spec G), **45**
- Harness, Remote Panel (Switch/Hourmeter) (Begin Spec G), **46**
- Harness, Remote Panel (Switch/Voltmeter) (Begin Spec G), **47**
- Harness, Voltage Regulator, **39**
- Head, Cylinder, **7**
- Holder, Control Panel Fuse, **39**
- Holder, Engine Harness Fuse, **41**
- Hose, Fuel, **19, 35**
- Hose, Oil Drain, **26**
- Hose, Preheater, **19**
- Hose, Vacuum, **19**
- Housing, Air, **33**
- Housing, Air Cleaner, **19**
- Housing, Breather, **7**
- Housing, Choke, **19**
- Housing, Generator Stator, **37**
- Housing, Underfloor, **34**
- Hub, Governor Cup, **10**

- Indicator, Oil Fill Tube, **25**
- Insulation, Exhaust Tube, **28**
- Insulator, PC Board, **39**
- Isolator, Vibration, **31**

- Jet, Idle, **20**
- Jet, Power, **20**
- Joint, Governor Ball, **16**

- Key, Blower Wheel, **13**
- Key, Camshaft Woodruff (Begin Spec B), **11**
- Key, Camshaft Woodruff (Spec A), **10**

- Key, Crankshaft Gear, **12**
- Kit, Carburetor Repair, **20**
- Kit, Choke Bimetal, **20**
- Kit, Choke Breaker, **20**
- Kit, Choke Shaft, **20**
- Kit, Engine Gasket, **50**
- Kit, Oil Pump Gasket, **50**
- Kit, Piston Ring, **7**
- Kit, Remote Panel (Spec A–F), **43**
- Kit, Remote Panel (Switch Only) (Begin Spec G), **45**
- Kit, Remote Panel (Switch/Hourmeter) (Begin Spec G), **46**
- Kit, Remote Panel (Switch/Voltmeter) (Begin Spec G), **47**
- Kit, Starter Drive, **21**
- Kit, Valve Grind Gasket, **50**

- Labels, **50**
- Line, Fuel, **19**
- Link, Governor Spring, **14**
- Linkage, Choke, **19**
- Linkage, Diaphragm Pulloff, **19**
- Lock, Valve Spring, **7**

- Manifold, Exhaust, **28**
- Manifold, Intake, **19**
- Meter, Battery Condition, **43**
- Meter, Hour, **46**
- Meter, Time Totalizing, **43**
- Meter, Voltage, **47**
- Muffler, **28**

- O'Ring, Generator, **37**
- O'Ring, Oil Drain Valve, **24**
- O'Ring, Oil Fill Cap, **24**
- O'Ring, Oil Fill Tube, **25**
- O'Ring, Oil Fill Tube Adapter, **25**
- O'Ring, Preheater Hose, **19**

- Paint, **50**
- Pan, Drip, **31**
- Panel, Air Housing Front, **33**
- Panel, Remote (Begin Spec G), **45, 46, 47**
- Panel, Remote (Spec A–F), **43**
- Panel, Underfloor Housing, **34**
- Pin, Bearing Stop Drive, **7**
- Pin, Camshaft Center, **10**
- Pin, Gear Cover Aignment, **9**
- Pin, Gearcase Alignment (Begin Spec B), **15**
- Pin, Gearcase Alignment (Spec A), **14**
- Pin, Piston, **7**
- Piston, **7**
- Plate, Bearing, **7**
- Plug, Air Cleaner Housing, **19**
- Plug, Camshaft Opening Welch, **7**
- Plug, Core Hole, **9**
- Plug, Gearcase, **15**
- Plug, Governor Adjust Access, **33**
- Plug, Intake Manifold Hex Head, **19**
- Plug, Spark, **27**

Index

Plunger, Bypass Valve, **7**
Plunger, Camshaft, **11**
Pump, Fuel, **19**
Pump, Oil, **9**

Rectifier, **39**
Reed, Breather Valve, **7**
Regulator, Voltage, **39**
Relay, Engine Harness, **41**
Relay, Start Solenoid, **39**
Relay, Stop Latch, **39**
Resistor, Battery Charger, **37**
Resistor, Fixed, **22**
Resistor, Fuel Pump, **37**
Resonator, Exhaust, **29**
Retainer, Governor Push-On, **16**
Ring, Camshaft Retaining, **10**
Ring, Choke Housing Retaining, **19**
Ring, Collector, **37**
Ring, Crankshaft Retaining, **12**
Ring, Piston Pin Retaining, **7**
Ring, Tolerance, **37**
Rod, Air Inlet, **19**
Rod, Connecting, **9**
Rod, Governor Control (Spec A), **16**
Rod, Throttle Control (Begin Spec B), **17**
Rotor, Generator, **37**
Rotor, Ignition, **27**

Seal, Crankshaft Oil (Begin Spec B), **15**
Seal, Crankshaft Oil (Spec A), **14**
Seal, Crankshaft Rear Oil, **7**
Seal, Drip Pan Air Outlet, **31**
Seal, Governor Shaft Oil, **14**
Seal, Muffler Support, **28**
Seal, Oil Fill Tube, **25**
Seal, Valve, **7**
Sealant, Thread, **50**
Seat, Valve, **7**
Shaft, Governor, **14**


Shield, Fuel Pump, **19**
Shield, Starter Lead, **21**
Shim, Crankshaft, **7**
Spring, Air Inlet, **19**
Spring, Breather Valve, **7**
Spring, Bypass Valve, **7**
Spring, Generator Brush, **37**
Spring, Governor, **16**
Spring, Plunger, **11**
Spring, Throttle Rod, **17**
Spring, Valve, **7**
Starter, **21**
Stator, Generator, **37**
Strap, Ground, **31**
Support, Muffler, **28**
Switch, Low Oil Pressure, **23**
Switch, On/Off, **39**
Switch, On/Off (Remote Panel), **43, 45, 46, 47**
System, Exhaust (Side/Bottom), **28**
System, Fuel, **19**

Tank, Fuel, **35**
Tappet, Valve, **7**
Tube, Breather, **19**
Tube, Choke Housing, **19**
Tube, Cylinder Block Oil, **9**
Tube, Elbow Exhaust, **28**
Tube, Extended Oil Fill, **25**
Tube, Oil Fill, **25**
Tube, Straight Exhaust, **29**

Valve, Exhaust, **7**
Valve, Fuel Solenoid, **19**
Valve, Intake, **7**
Valve, Oil Base Drain/Shutoff, **24**
Valve, Shutoff, **35**

Wheel, Blower, **13**
Yoke, Governor Shaft (Spec A), **14**


Cylinder Block

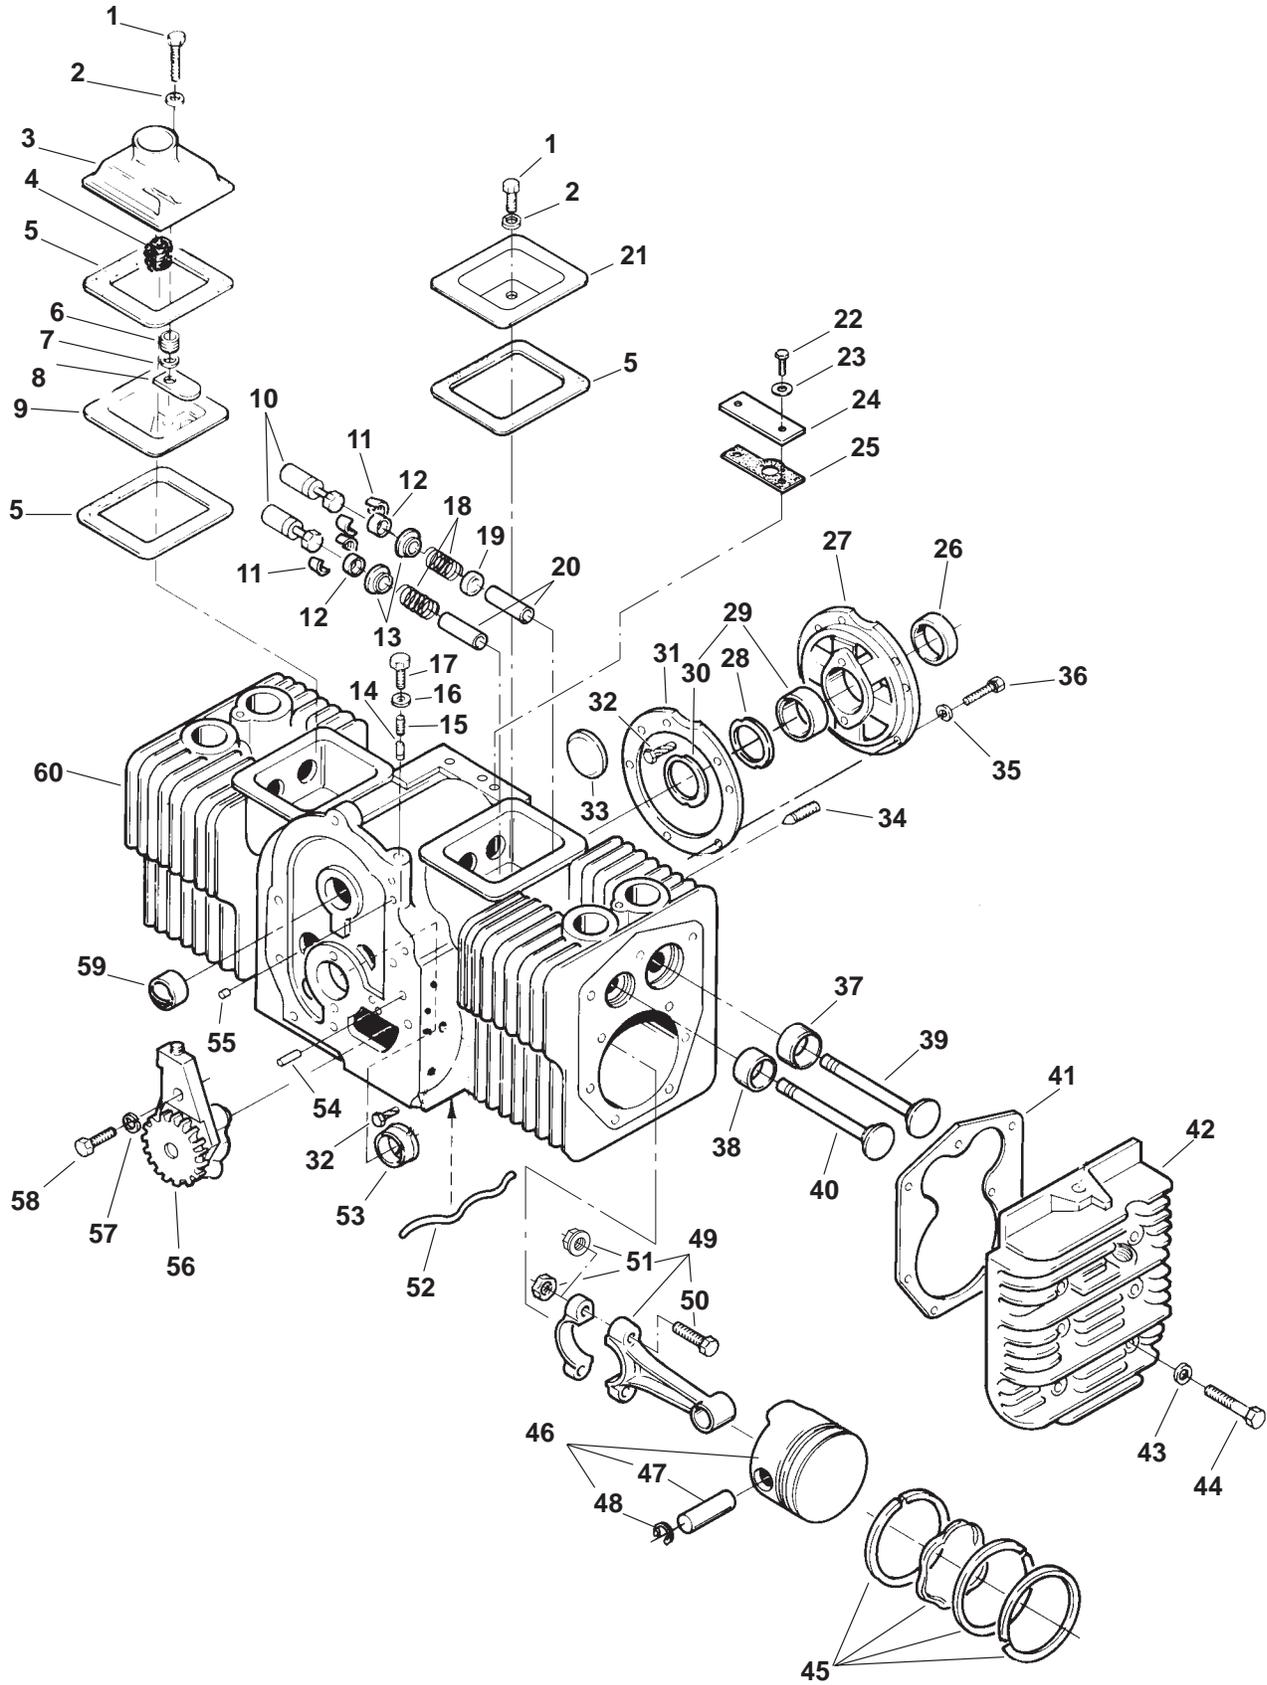

Cylinder Block

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-0009	1	Screw, Hex Head Cap (1/4-20 x 1-1/2")	34	803-0071	2	Screw, Set Socket (3/8-16 x 5/8")
2	526-0063	2	Washer, Copper Flat (1/4")	35			Washer
3	123-1649	1	Housing, Left Side Breather		850-0050	5	Specs A-B - Lock (3/8")
4	123-1871	1	Filter, Breather Tube		526-0402	5	Begin Spec C - Flat (.385")
5	110-3709	3	Gasket, Valve Cover	36			Screw, Cap
6	123-1174	1	Spring, Breather Valve		800-0575	5	Flanged Head (Special) (Specs A-B)
7	526-0018	1	Washer, Flat (1/4")		800-0051	5	Hex Head (3/8-16 x 1-1/4") (Begin Spec C)
8	123-1175	1	Reed, Breather Valve				
9	123-1173	1	Baffle, Breather Valve				
10			Tappet, Valve	37			Seat, Intake Valve
	115-0006	4	Standard		110-0197	2	Standard
	115-0006-02	4	.002" Oversize		110-0197-10	2	.010" Oversize
	115-0006-05	4	.005" Oversize	38			Seat, Exhaust Valve
11	110-3511	8	Lock, Valve Spring		110-1824	2	Standard
12	110-3510	4	Cap, Valve		110-1824-02	2	.002" Oversize
13	110-3487	4	Washer, Valve Spring-Retg		110-1824-05	2	.005" Oversize
14	120-0398	1	Plunger, Bypass Valve		110-1824-10	2	.010" Oversize
15	120-0140	1	Spring, Bypass Valve		110-1824-25	2	.025" Oversize
16	526-0066	1	Washer, Copper Flat (3/8")	39	110-3479	2	Valve, Intake
17	801-0049	1	Screw, Hex Head Cap (3/8-24 x 7/8")	40	110-3515	2	Valve, Exhaust
				41	110-3181	2	Gasket, Cylinder Head
18	110-3485	4	Spring, Valve	42			Head, Cylinder
19	509-0289	2	Seal, Intake Valve		110-3509	1	Right Side
20			Guide, Valve		110-3508	1	Left Side
	110-3527	2	Exhaust	43	526-0122	18	Washer, Flat (5/16")
	110-3526	2	Intake	44	800-0571	18	Screw, Hex Head Cap (Special) 2" Long
21	110-1879-01	1	Cover, Right Side Valve				Kit, Piston Ring
22	800-0004	2	Screw, Hex Head Cap (1/4-20 x 5/8")	45			Spec A-B
23	740-1004	2	Washer, Flat (M6)		113-0314	2	Standard
24	160-1345-01	1	Cover, Breaker Box Opening - Prime Painted		113-0314-05	2	.005" Oversize
					113-0314-10	2	.010" Oversize
25	160-1368	1	Gasket, Breaker Box Opening		113-0314-20	2	.020" Oversize
26	509-0041	1	Seal, Crankshaft Rear Oil		113-0314-30	2	.030" Oversize
27	101-0439-01	1	Plate, Rear Bearing				Begin Spec C
28			Shim, Crankshaft (Use as Required)		113-0310	2	Standard
	104-0776	1	.005"		113-0310-05	2	.005" Oversize
	104-0776-01	1	.003"		113-0310-01	2	.010" Oversize
29			Bearing, Rear Crankshaft (Includes Thrust Washer)		113-0310-02	2	.020" Oversize
					113-0310-03	2	.030" Oversize
	101-0804	1	Standard	46			Piston (Includes Pin and Retaining Rings)
	101-0804-02	1	.002" Undersize		112-0264	2	Standard
	101-0804-10	1	.010" Undersize		112-0264-05	2	.005" Oversize
	101-0804-20	1	.020" Undersize		112-0264-01	2	.010" Oversize
	101-0804-30	1	.030" Undersize		112-0264-02	2	.020" Oversize
30	104-0575	2	Washer, Thrust (Special)		112-0264-03	2	.030" Oversize
31	101-0809	1	Gasket, Bearing Plate	47	112-0229	2	Pin, Piston
32	516-0072	2	Pin, Bearing Stop Drive	48	518-0311	4	Ring, Retaining
33	517-0048-01	1	Plug, Camshaft Opening Welch (1-5/8")				


Cylinder Block

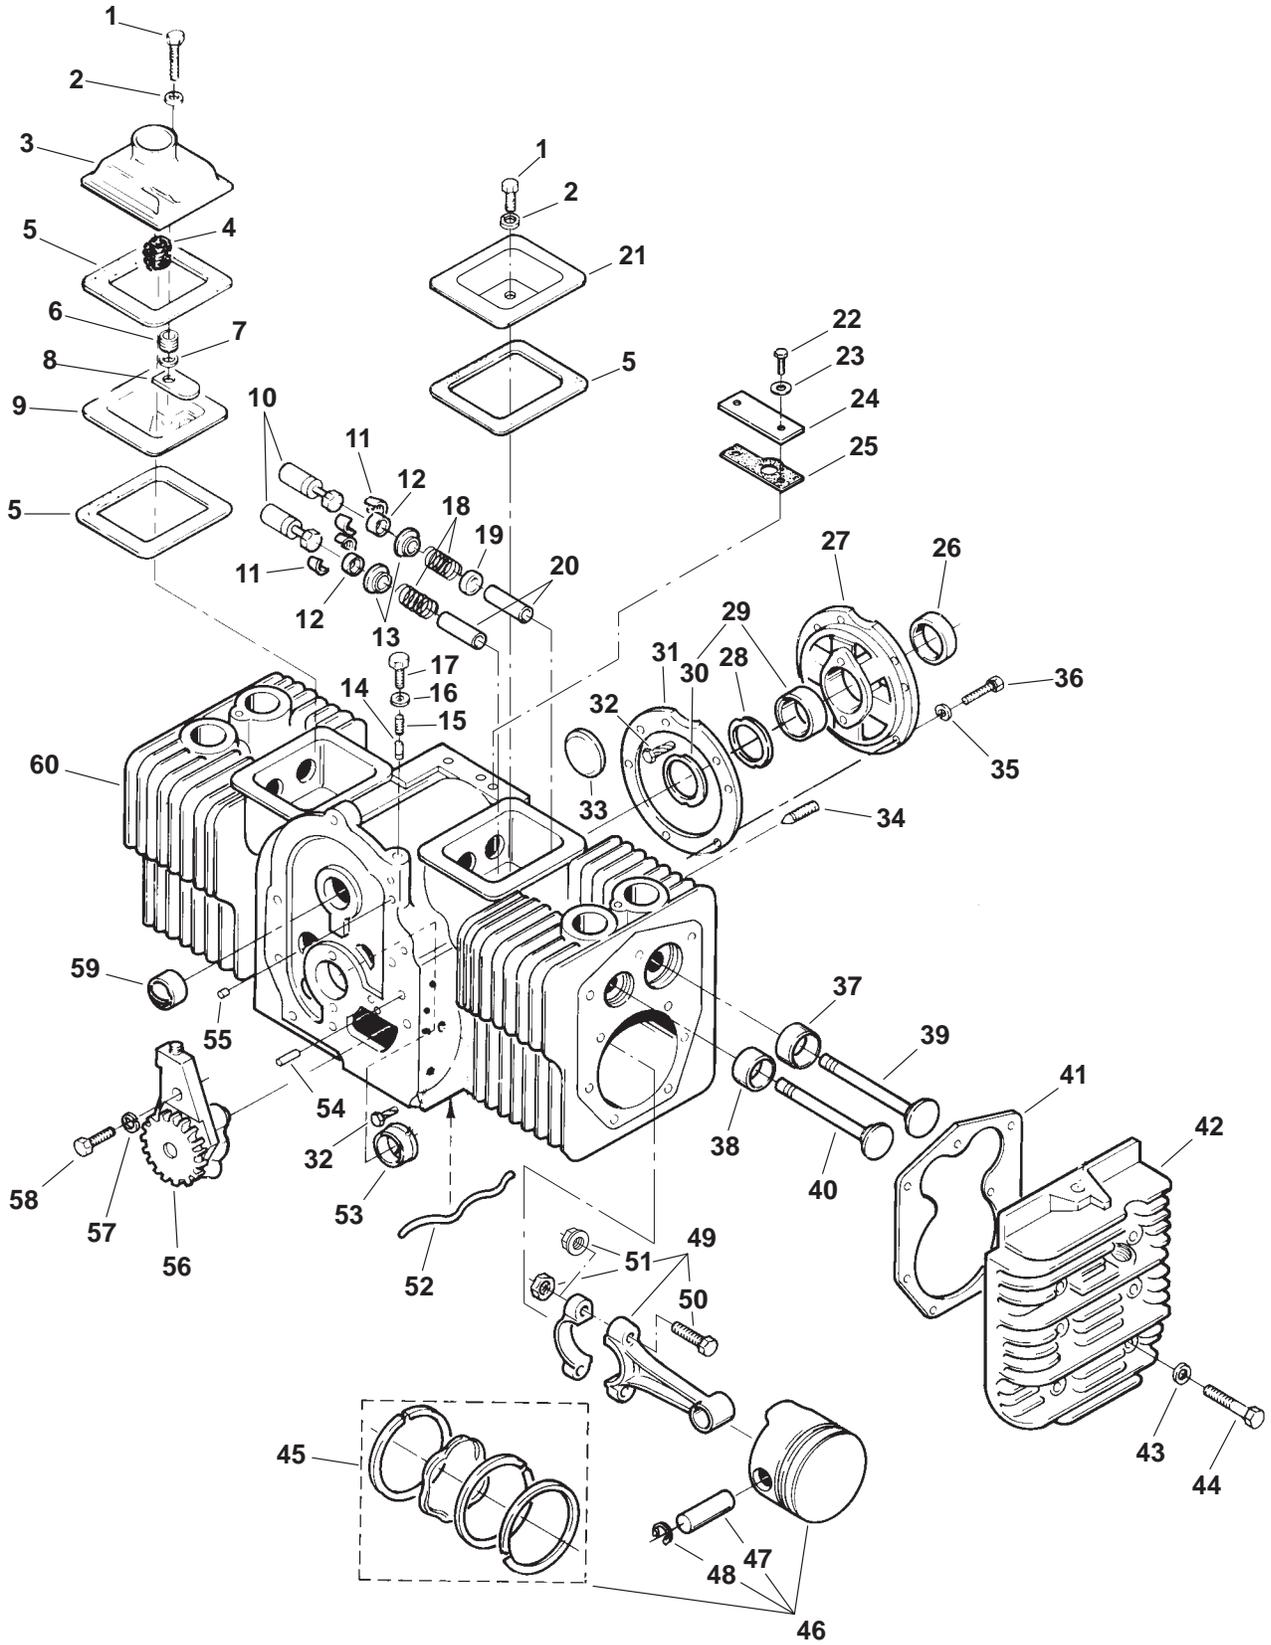

Cylinder Block


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
49			Rod, Connecting (Includes Bolt and Nut)	54	516-0141	2	Pin, Gear Cover Alignment
	114-0397	2	Standard	55	517-0067	1	Plug, Core Hole
	114-0397-10	2	.010" Undersize	56	120-0491	1	Pump, Oil (Components Not Sold Separately)
	114-0397-20	2	.020" Undersize	57	740-1004	2	Washer, Flat (M6)
	114-0397-30	2	.030" Undersize	58	800-0007	2	Screw, Hex Head Cap (1/4-20 x 1")
50	114-0392	4	Bolt, Connecting Rod (Special)	59	101-0405	2	Bearing, Camshaft
51			Nut	60	-	1	Block, Cylinder (See Short Block Catalog #932-0109)
	870-0302	4	Self-Locking (5/16-24)				
	870-0533	4	Hex Flange				
52	120-1320	1	Tube, Cylinder Block Oil				
53			Bearing, Front Crankshaft (Flanged)				
	101-0805	1	Standard				
	101-0805-02	1	.002" Undersize				
	101-0805-10	1	.010" Undersize				
	101-0805-20	1	.020" Undersize				
	101-0805-30	1	.030" Undersize				

Camshaft Spec A

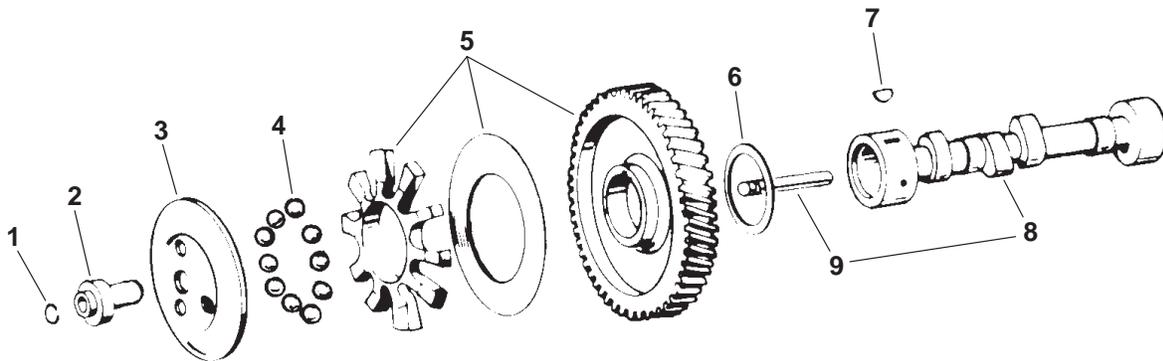


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	150-0078	1	Ring, Retaining	6	105-0541	1	Washer, Thrust
2	150-1519	1	Hub, Governor Cup	7	515-0001	1	Key, Woodruff
3	150-1520	1	Cup, Governor (Includes Bushing)	8	105-0637	1	Camshaft (Includes Center Pin)
4	510-0015	10	Ball, Governor	9	150-0075	1	Pin, Center
5	105-0700	1	Gear (Includes Spacer and Plate)				

Camshaft Begin Spec B

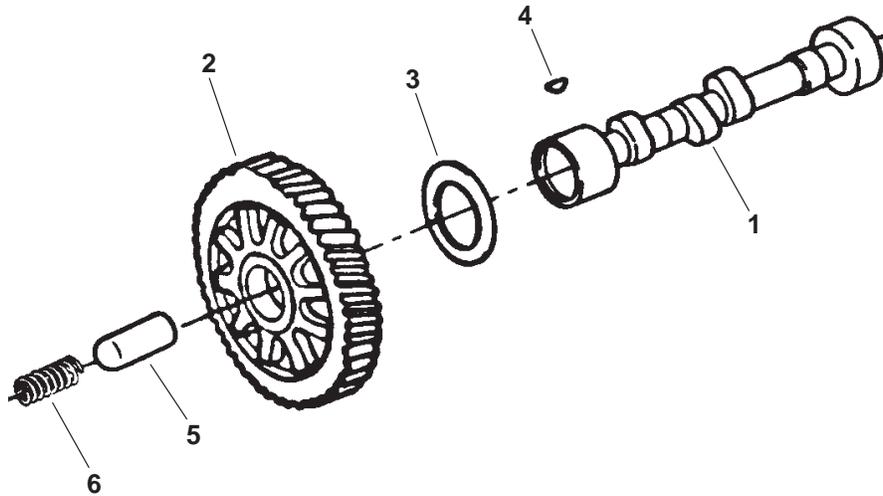


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	105-0677	1	Camshaft	4	515-0001	1	Key, Woodruff
2	105-0700	1	Gear (Includes Spacer and Plate)	5	105-0058	1	Plunger, Camshaft
3	105-0541	1	Washer, Thrust	6	105-0059	1	Spring, Plunger

Crankshaft

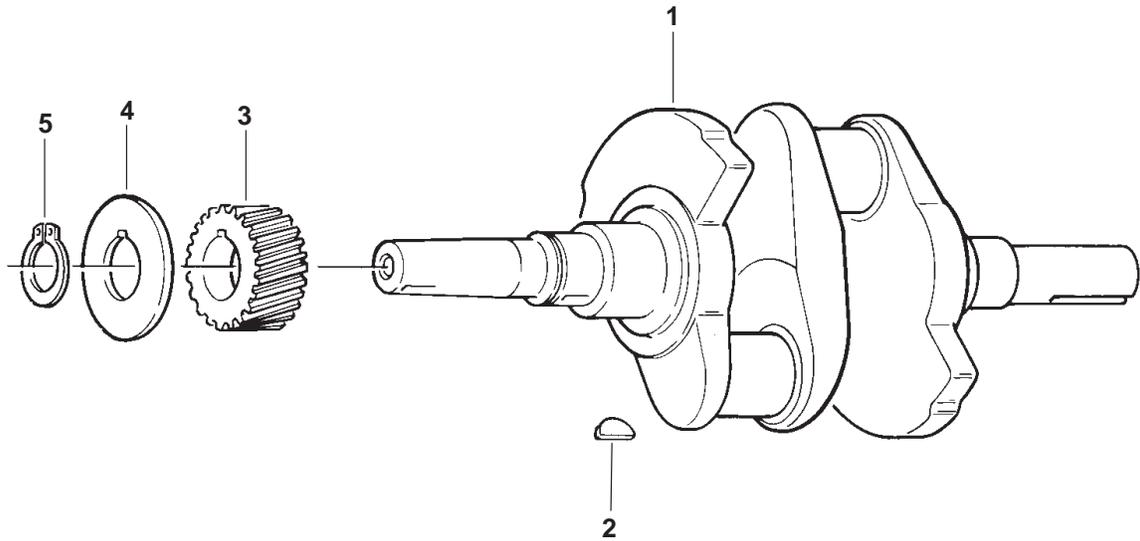


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	104-1735	1	Crankshaft	4	104-0043	1	Washer, Gear
2	515-0001	1	Key, Gear	5	518-0014	1	Ring, Retaining
3	104-0032	1	Gear				

Blower Wheel

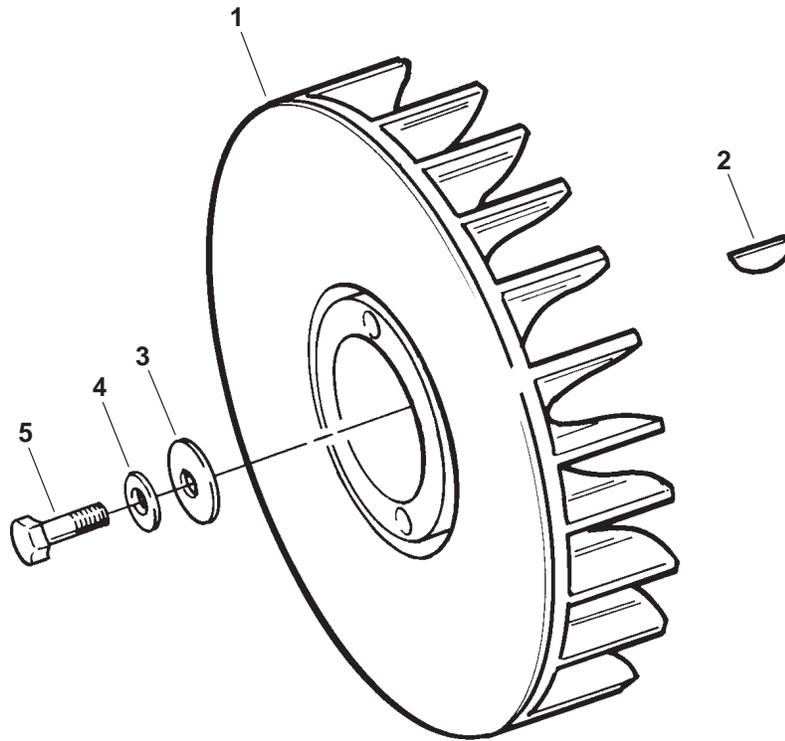

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	134-4705	1	Wheel, Blower	4	526-0356	1	Washer, Flat (7/16" x 1/8"THK)
2	515-0263	1	Key, Blower Wheel				Special
3	526-0017	1	Washer, Flat (7/16" x 1/4"THK) Special	5	104-0170	1	Screw (Special)


Gearcase Spec A

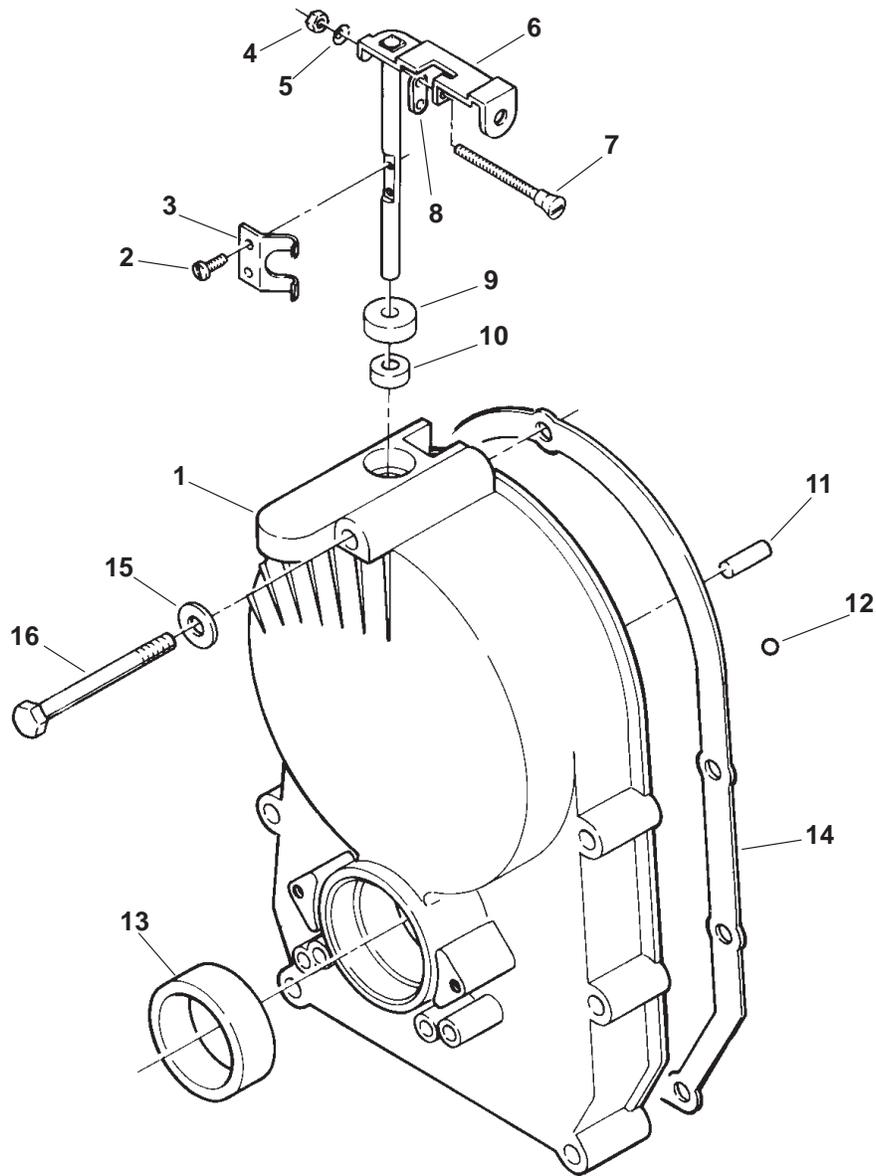

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	103-0804	1	Gearcase Assy (Includes Parts Marked *) (Spec A)	10	510-0013	1	*Bearing, Needle
2	815-0046	2	*Screw, Pan Head Machine Cross Recessed (#8-32 x 3/8")	11	516-0130	1	*Pin, Alignment
3	150-1187	1	*Yoke	12	510-0014	1	*Ball, Bearing
4	870-0328	1	*Nut, Self-Locking (#10-32)	13	509-0040	1	*Seal, Crankshaft Front Oil
5	851-0031	1	*Washer, Conical Disc Spring	14	103-0810	1	Gasket, Gearcase
6	150-2002-04	1	*Shaft, Governor	15	526-0065	5	Washer, Copper Flat (5/16")
7	150-2300	1	*Screw, Governor Adjust Guide (Special)	16	114-0022	4	Screw, Hex Head Cap 5/16-18 x 1-3/4"
8	150-1998	1	*Link, Governor Spring	800-0592		1	5/16-18 x 3-1/4"
9	509-0008	1	*Seal, Oil				


* - Parts Included in Gearcase Assy.

Gearcase Begin Spec B

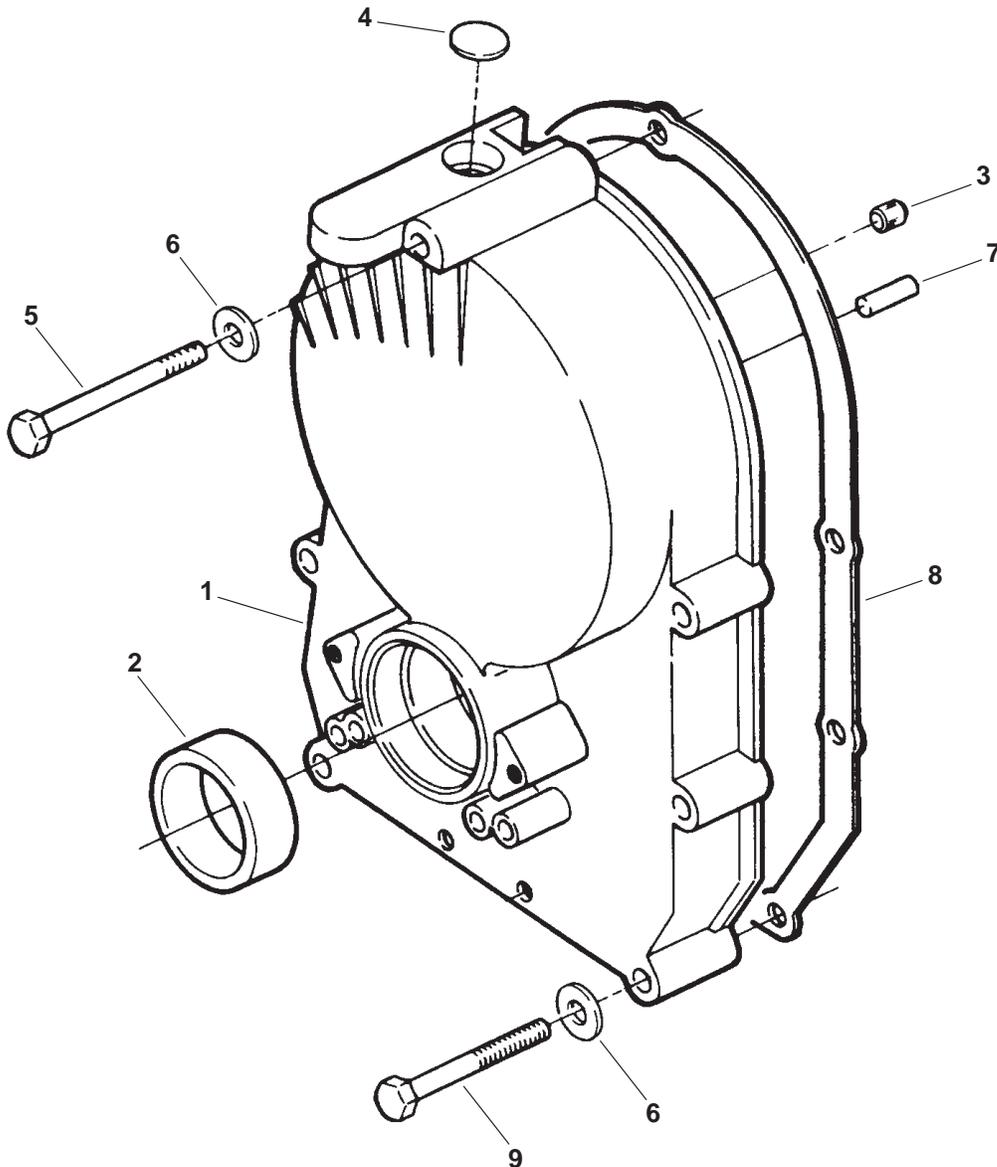


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	103-0813	1	Gearcase Assy (Includes Seal and Plugs)	6	526-0065	5	Washer, Flat (5/16")
2	509-0040	1	Seal, Crankshaft Front Oil	7	516-0141	2	Pin, Alignment
3	516-0051	1	Plug	8	103-0810	1	Gasket, Gearcase
4	517-0293	1	Plug, Expansion	9	800-0032-01	4	Screw, Hex Head Cap (1-3/4" Lg.)
5	800-0545	1	Screw, Hex Head Cap (5/16-18 x 2-3/4")				

Governor Spec A

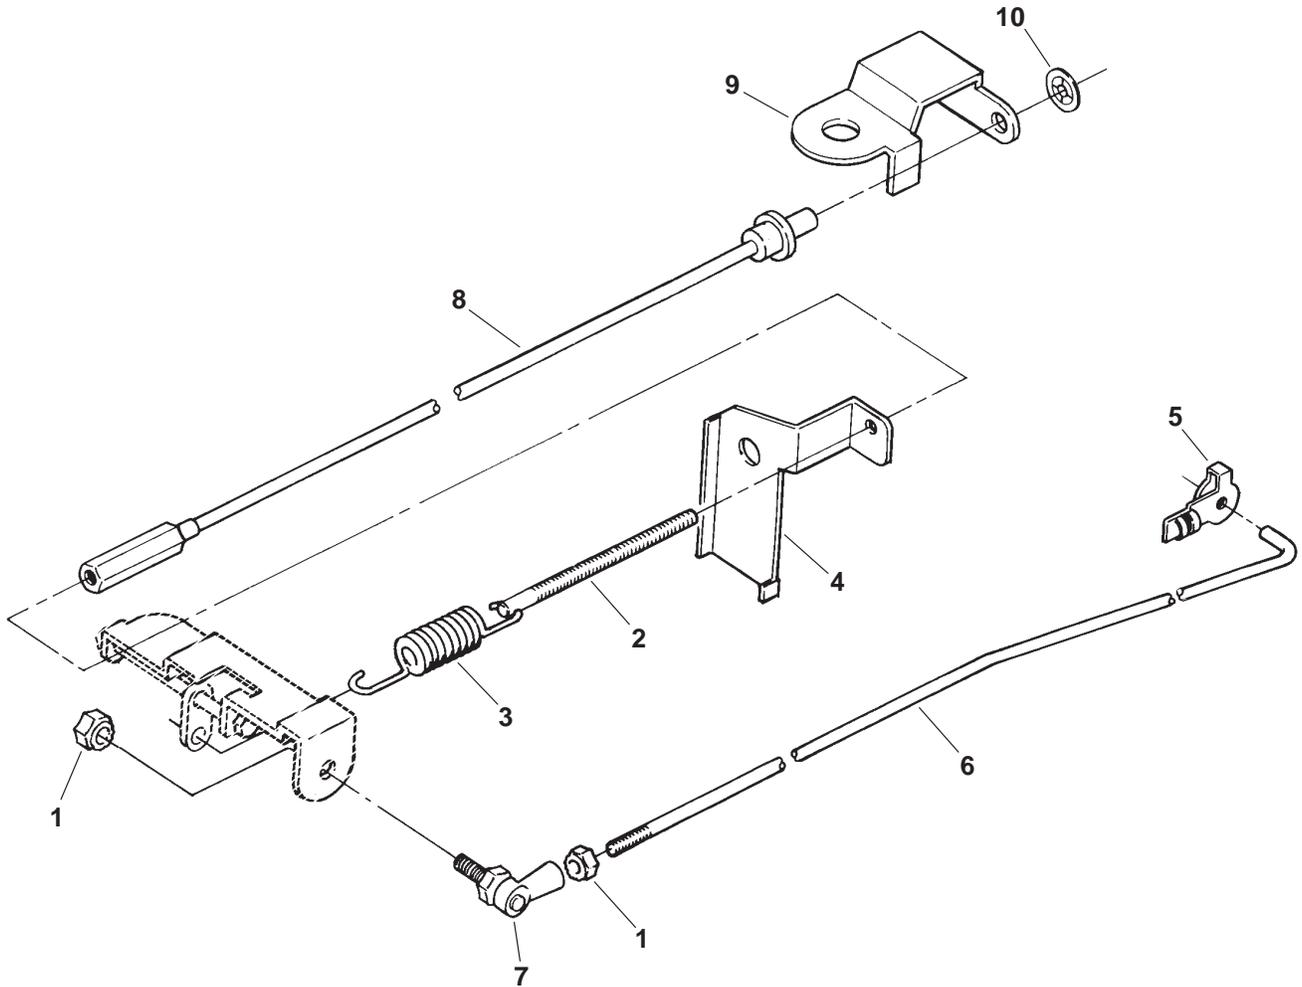


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-0131	2	Nut, ET Hex (#10-32)	6	150-1957	1	Rod, Governor Control
2	150-0096	1	Stud, Governor Adjusting	7	150-0939	1	Joint, Ball
3	150-1612	1	Spring, Governor	8	150-2294	1	Cable, Flexible Adjust
4	150-2298-01	1	Bracket, Governor	9	150-2295	1	Bracket, Cable Adjust
5	518-0006	1	Clip, Retaining	10	518-0582	1	Retainer, Push-On

Electronic Governor Begin Spec B

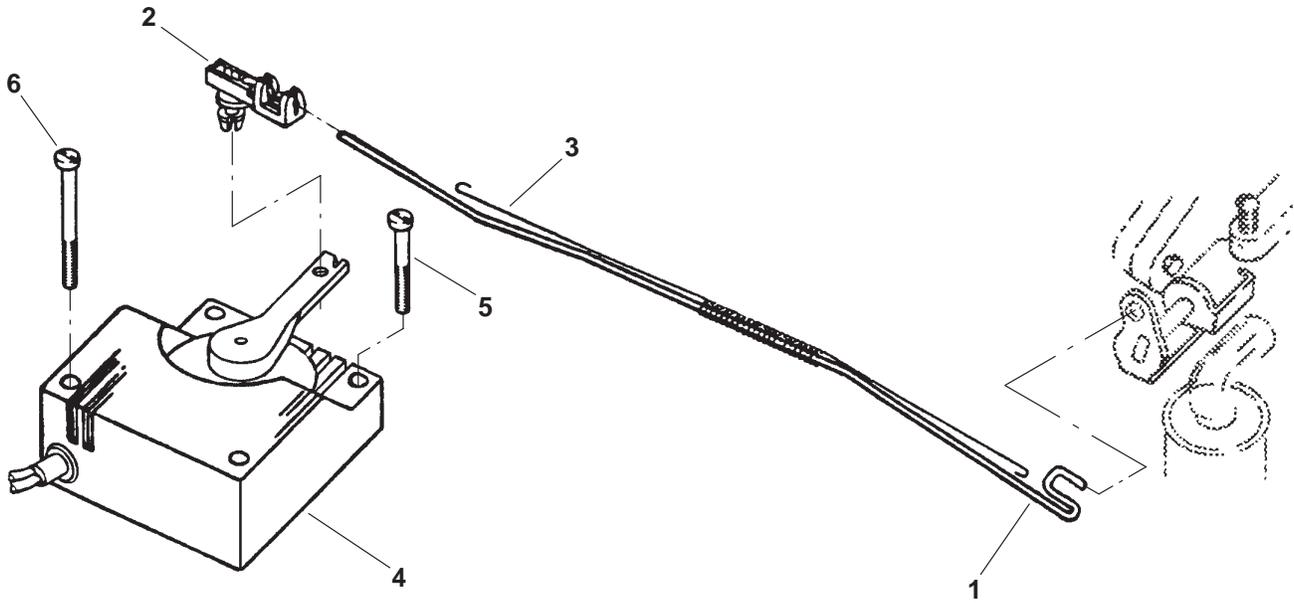

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	150-2424	1	Rod, Throttle Control	5	815-0783-01	2	Screw, Pan Head (#10-32 x 1-5/8")
2	150-2425	1	Clip, Throttle Rod	6	815-0783-02	2	Screw, Pan Head (#10-32 x 2-1/8")
3	150-2426	1	Spring, Throttle Rod				
4	151-0701	1	Actuator, Governor (K2)				


Fuel System

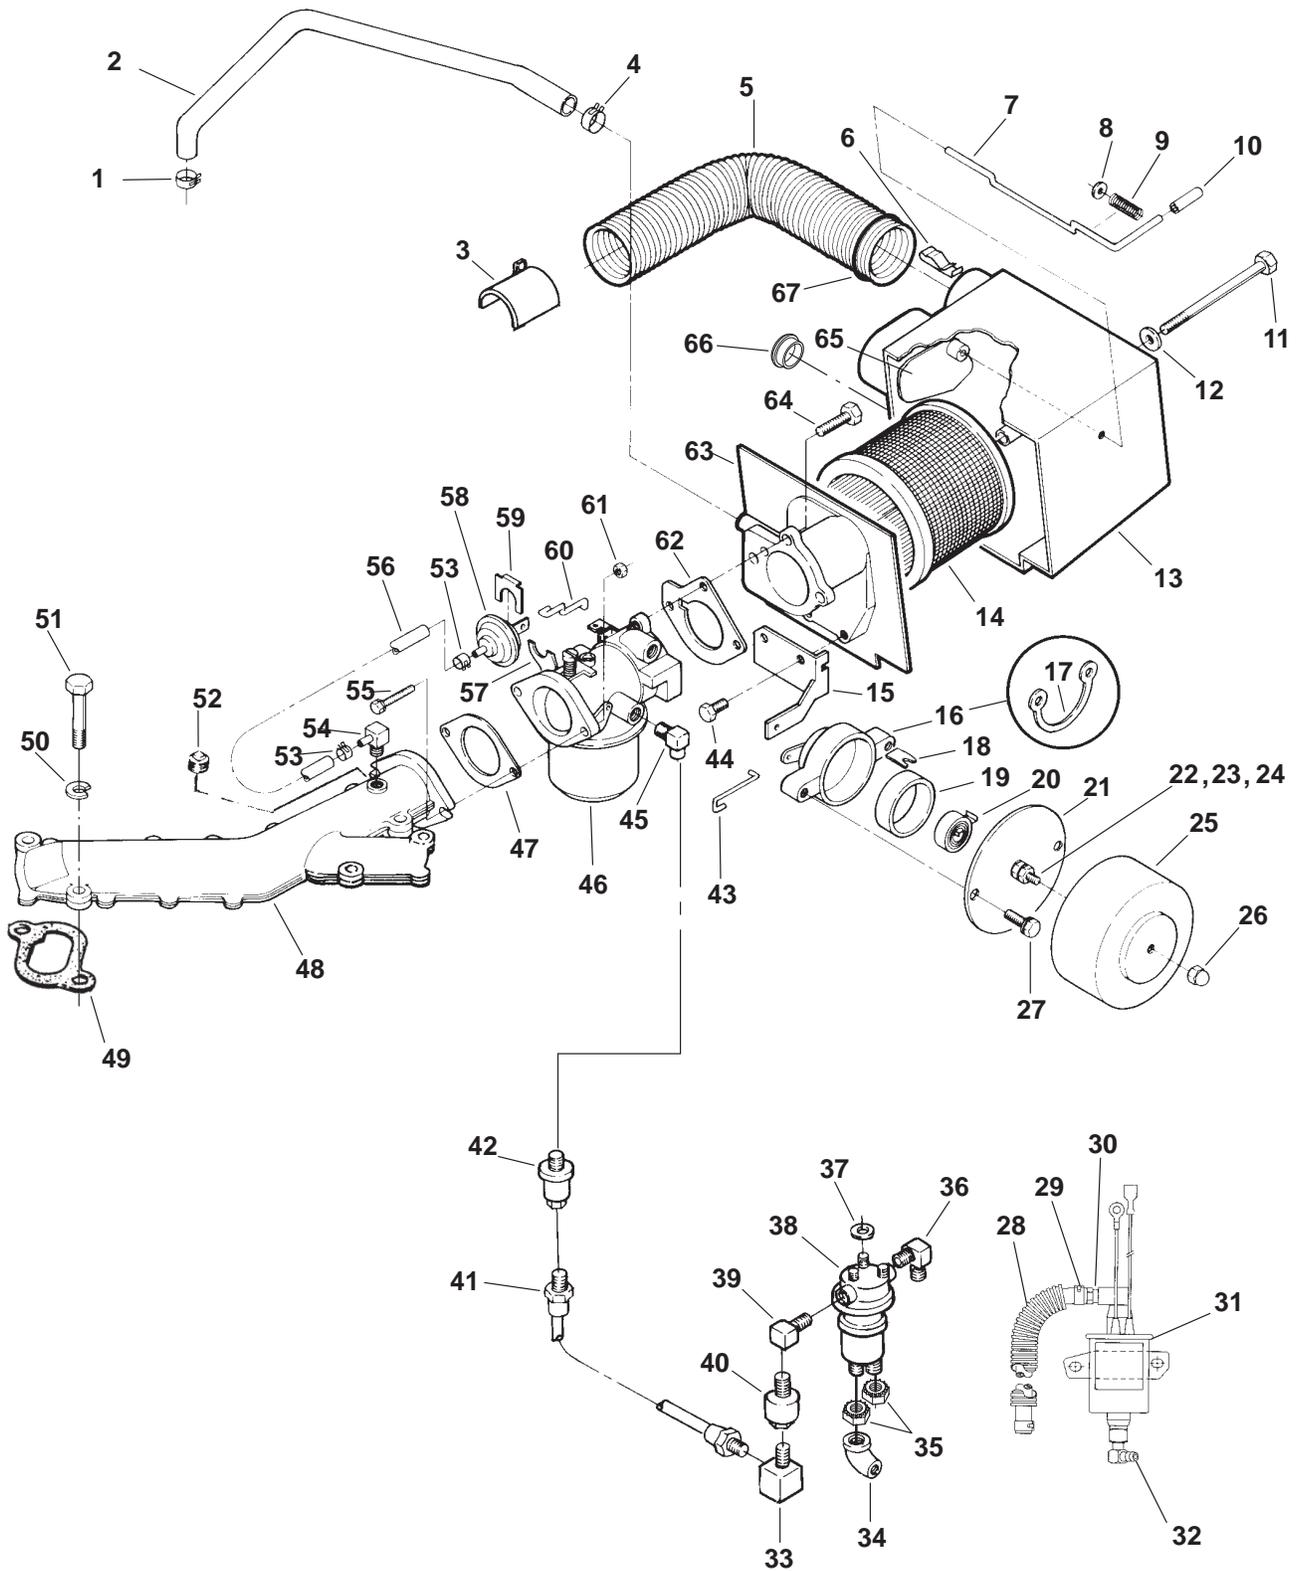


Fuel System

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-1133	1	Clamp, Hose	36	502-1107	1	Elbow, 90° Barbed – Inlet
2	123-1852	1	Tube, Breather	37			Washer, Flat
3	140-1919-50	1	Adapter, Preheater		526-0115	3	Spec A (.344)
4	503-0183	1	Clamp, Hose		526-0115	3	Begin Spec B (.3125)
5	503-1351	1	Hose, Preheater	38	149-2267	1	Pump, Fuel (E3) (Spec A-F)
6	518-0459	1	Clip, Preheater Hose (Spec A-B)	39	502-0054	1	Elbow, 90° Street – Outlet
7			Rod, Air Inlet	40			Valve, Fuel Solenoid (E4)
	145-0707	1	Spec A-E		307-1279	1	Spec A
	145-0704	1	Begin Spec F		307-2756	1	Spec B,C
8	526-0002	1	Washer, Flat (#6)		307-2788	1	Spec D
9	120-0140	1	Spring, Air Inlet	41	501-0550	1	Line, 30" Flexible Fuel
10	517-0223	1	Cap, Vinyl	42			Filter, Fuel
11	800-0017	1	Screw, Hex Head Cap (1/4-20 x 3-1/2")		149-2279	1	Spec A-F
12	526-0021	1	Washer, Flat (1/4")	43	153-0558	1	Linkage, Choke (Spec A-C)
13			Housing, Air Cleaner	44	815-0591	2	Screw, Hex Washer Head Cap Thread Forming(1/4-10 x 3/4")
	140-1894	1	Spec A-C	45	502-1108	1	Elbow, 90° Street
	140-2883-01	1	Begin Spec D	46			Carburetor (See Separate Page for Components)
14	140-2379	1	Element, Air Cleaner		146-0455	1	Spec A
15	153-0557	1	Bracket, Choke Mounting (Spec A-C)		146-0528	1	Spec B-C
16	153-0556	1	Housing, Choke (Spec A-C) (Includes Choke Shaft, Insulating Washer and Retainer Ring) (H1)		146-0664	1	Begin Spec D (Includes Gaskets)
17	518-0387	1	Ring, Retaining (Spec A-C)	47			Gasket, Mounting
18	518-0466	1	Clip, Choke Housing Tube Retaining (Spec A-C)		141-0281	1	Spec A
19	153-0578	1	Tube, Choke Housing (Spec A-C)		141-0958	1	Begin Spec B
20	153-0554	1	Element, Thermostat (Spec A-C)	48			Manifold, Intake
21	153-0555	1	Cover, Choke (Spec A-C) (Includes Hex Nuts, Washers, Heater Coil Spider and Choke Heater Element)		154-2447	1	Spec A-F
22	526-0047	2	Washer, Flat (#6) (Spec A-C)		154-3026	1	Begin Spec G
23	854-0006	2	Washer, IT Lock (#6) (Spec A-C)	49	154-2495	1	Gasket, Intake Manifold
24	871-0006	2	Nut, Brass Hex (6-32") (Spec A-C)	50	740-1006	4	Washer, Flat (M8)
25	153-0579	1	Cover, Choke Housing (Spec A-C)	51	800-0033	4	Screw, Hex Head Cap (5/16-18 x 2")
26	870-0421	1	Nut, Nylon Acorn Cap (#6-32) (Spec A-C)	52	502-0028	1	Plug, Hex Head Pipe (Begin Spec D)
27	815-0592	2	Screw, Hex Washer Head Thread Forming (Spec A-C) (#8-32 x 1-3/8")	53	503-0813	2	Clamp, Hose (Spec A-C)
28	503-2041	1	Hose, Fuel	54	502-1105	1	Fitting, 90° Flow Vacuum (Spec A-C)
29	503-0731	2	Clamp, Hose	55	815-0587	2	Screw, Hex Flange Head Cap (5/16-18 x 1")
30	502-0395	1	Connector, Hose	56	503-1252-01	1	Hose, Vacuum (3/16" ID x 6") (Spec A-C)
31	149-2331-03	1	Pump, Fuel (E3) (Begin Spec G)	57	153-0561	1	Bracket, Diaphragm Mounting (Spec A-C)
32	502-0313	1	Elbow, 90° Hose	58	153-0614	1	Diaphragm, Pulloff (Spec A-C)
33	502-0020	1	Elbow, 90° Street – Valve Outlet	59	518-0450	1	Clip, Diaphragm Mounting "U" (Spec A-C)
34	122-0345	1	Shield, Fuel Pump	60	153-0577	1	Linkage, Diaphragm Pulloff (Spec A-C)
35	870-0131	2	Nut, ET Hex (#10-32)	61	862-0015	1	Nut, Hex (5/16-18)
				62	140-2308	1	Gasket, Air Horn
				63	140-3093	1	Adapter, Air Cleaner
				64	815-0590	3	Screw, Hex Head Machine (#10-32 x 7/16")
				65	145-0561	1	Cover, Air Inlet
				66	517-0320	1	Plug, Button (Begin Spec D)
				67	509-0313	1	O'Ring (Begin Spec C)


Carburetor Components

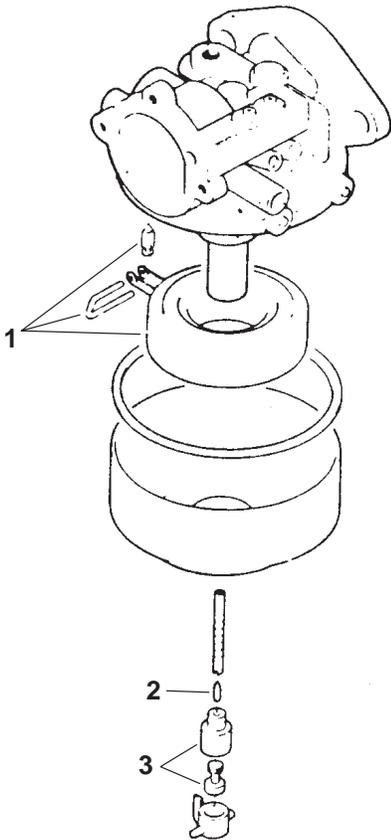

Spec A-C

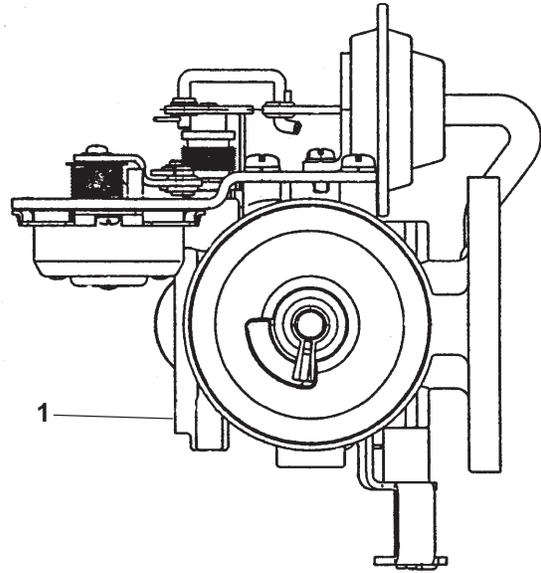


Begin Spec D

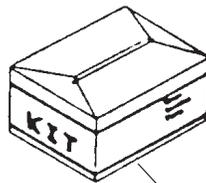

4, 5, 6, 7


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	146-0455	1	Carburetor Spec A (Includes Mounting Gaskets)	5	146-0589	1	Kit, Choke Breaker (Includes Choke Piston Rod, Link Washer, Snap Pin, Choke Opener Assy)
	146-0528	1	Spec B,C	6	146-0592	1	Kit, Choke Shaft (Includes Choke Shaft Assy, Choke Collar, Choke Arm Return Spring, Choke Valve, Valve Set Screw, Choke Lever Assy)
	146-0664	1	Begin Spec D (Includes Mounting Gaskets)	7	146-0457	1	Kit, Repair (Includes Gasket Package, Float Valve, Idle Adjust Needle and Spring, Mounting Gaskets, Adjust Limit Caps, Throttle Stop Screw and Spring) (Spec A-C)
1	146-0453	1	Float Package (Includes Float, Pin and Valve)				
2	146-0449	1	Jet, Idle (Spec A-C)				
3	146-0450	1	Jet, Power (Spec A-C)				
4	146-0588	1	Kit, Choke Bimetal (Includes Compl. Bimetal Holder, Thermostat Cover Assy, Bimetal Set Plate, Bimetal Case Set Screw)				

Starter

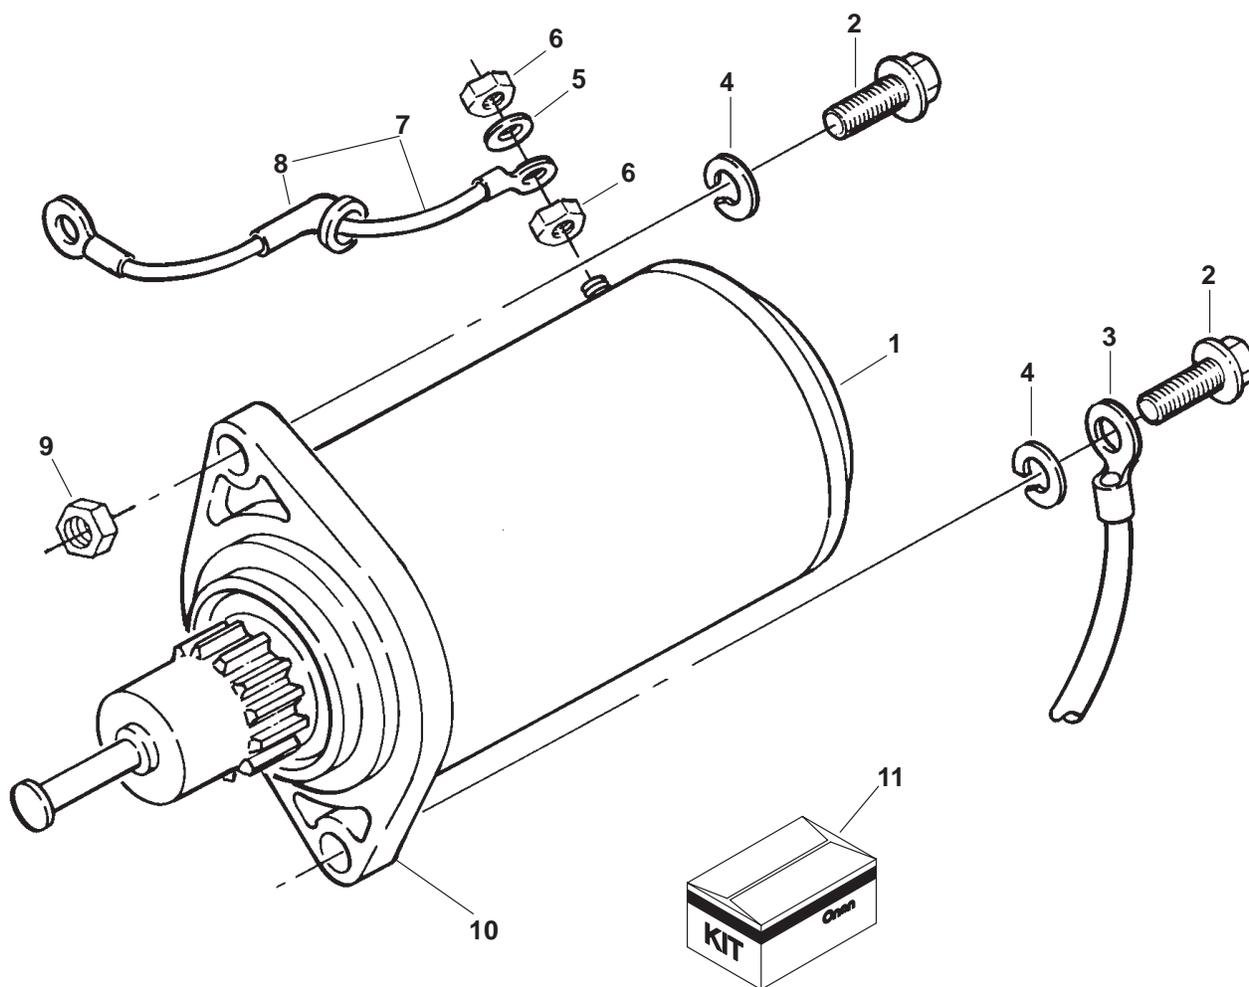


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-2158	1	Starter (B1)	7	226-3457-01	1	Lead, Starter (Includes Shield)
2	800-0052	2	Screw, Hex Head Cap (3/8-16 x 1-1/2")	8	122-0345	1	Shield
3	337-2435	1	Cable (Spec A)	9	862-0003	2	Nut, Hex (3/8-16)
4	850-0050	2	Washer, Spring Lock (3/8")	10	191-2186	1	Cap, Drive
5	850-0040	1	Washer, Spring Lock (1/4")	11	191-2187	1	Kit, Drive (Includes Retainers, Washers, Spring, Cover, Roll Pin, Pinion Gear, Drive Clutch)
6	862-0001	2	Nut, Hex (1/4-20)				

Resistor Spec A-F

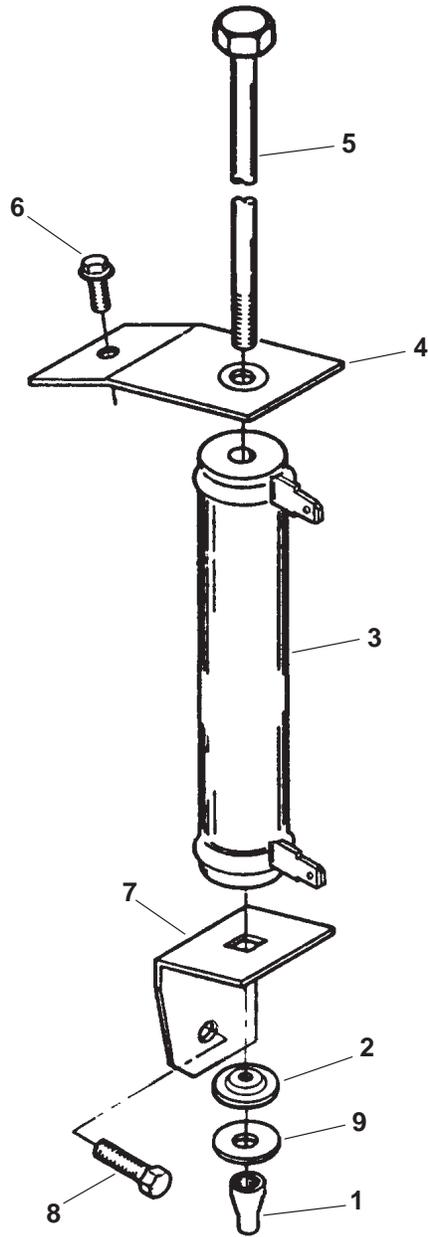


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-0196	1	Nut, Insulation (#8)	6	815-0770	1	Screw, Hex Washer Head Thread Form (#10-32 x 1/2")
2	304-0015	1	Washer, Centering	7	304-0772	1	Bracket, Resistor Mounting
3	304-0818	1	Resistor, Fixed - 1.4 Ohms 50 Watts	8	815-0261	1	Screw, Hex Washer Head Thread Cutting (1/4-20 x 1/2")
4	304-0773	1	Bracket, Resistor Mounting	9	508-0321	1	Washer, Flat (.184)
5	815-0583	1	Screw, Hex Head Cap (#8-32 x 4.75")				

Oil Filter

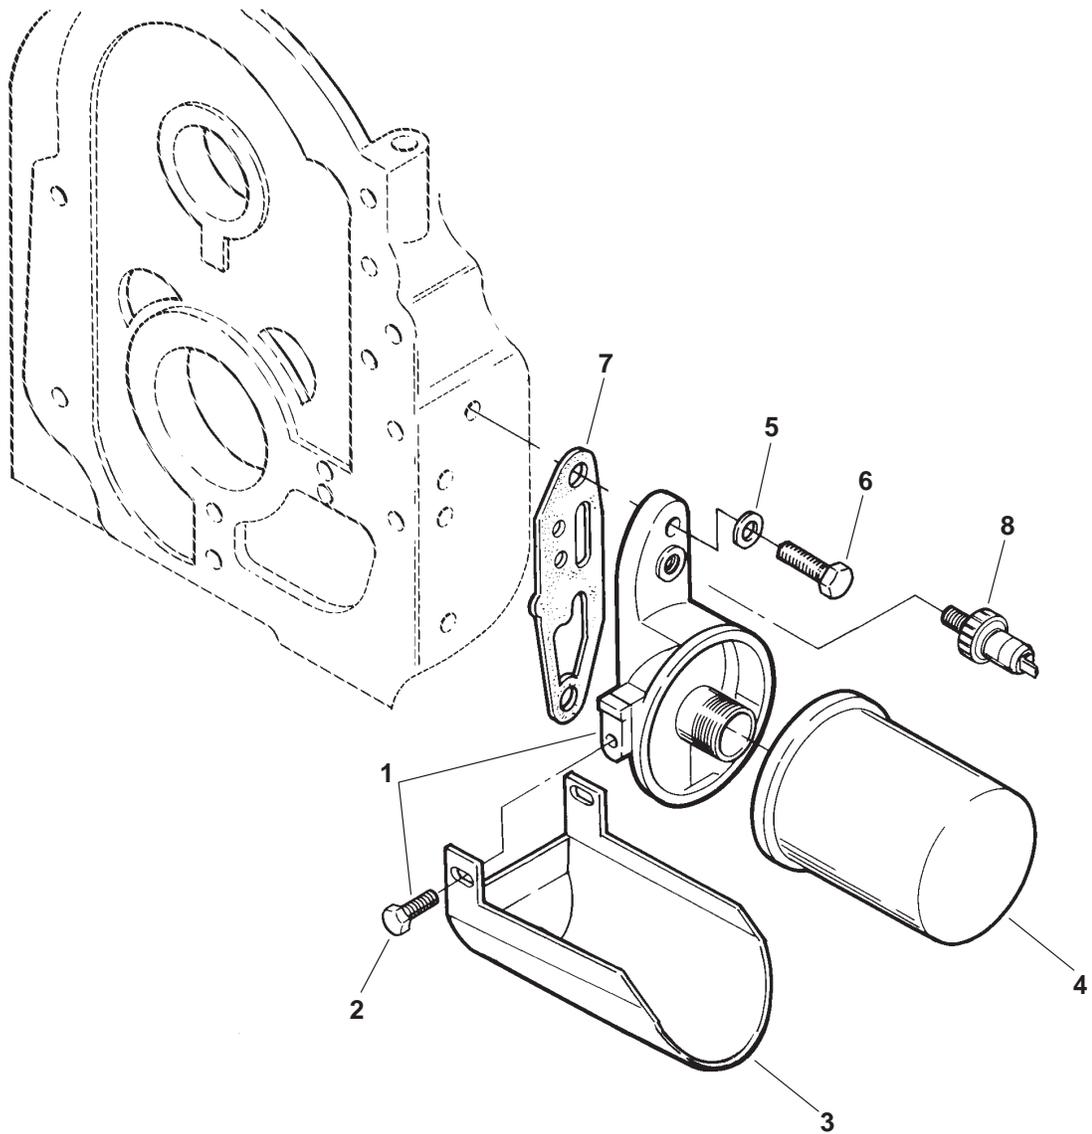


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	122-0814	1	Adapter, Oil Filter (Includes Screws)	6	800-0028-01	2	Screw, Hex Head Cap (5/16-18 x 1")
2	815-0340	2	Screw, Hex Head Cap Thread Forming with ET (#10-32 x 3/8")	7	122-0771	1	Gasket, Oil Filter Adapter
3	122-0360-55	1	Drain, Oil Filter	8	309-0322	1	Switch, Low Oil Pressure (S2) Spec A - Open - to Close at 5-9 PSI
4	122-0645	1	Filter, Oil		309-0615	1	Begin Spec B - Close to Open at 5-9 PSI
5	526-0065	2	Washer, Copper Flat (5/16")				

Oil Base

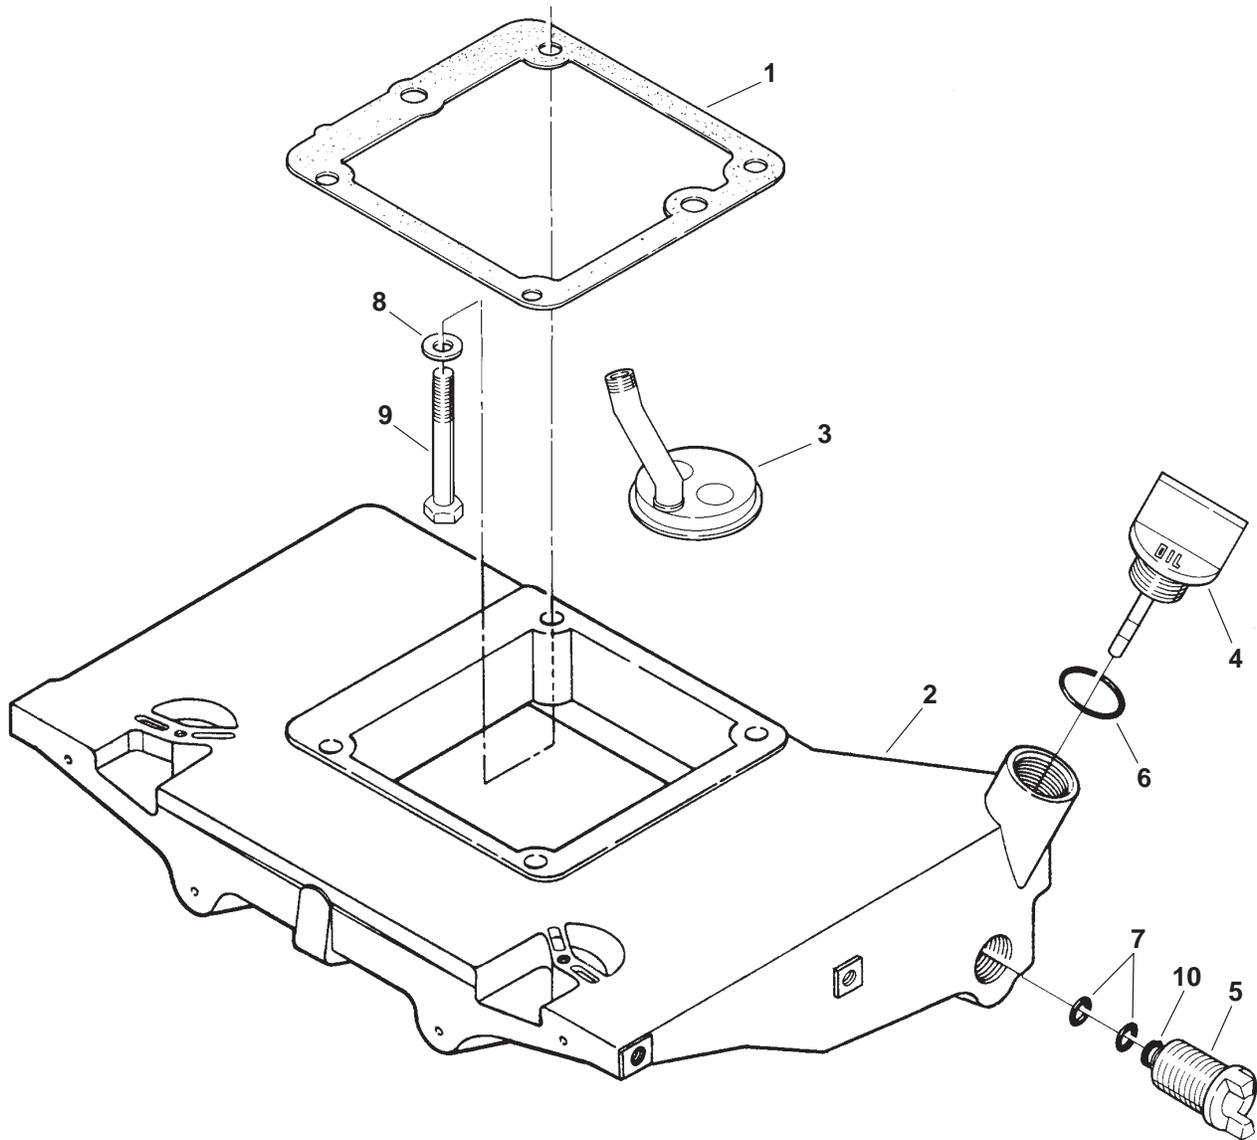


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	102-1387	1	Gasket, Oil Base	6	509-0246	1	O'Ring (1-1/4" ID)
2	102-1359	1	Base, Oil	7	509-0247	2	O'Ring (3/8" ID) (Spec A-F)
	102-1457-01	1	Spec A-F Begin Spec G	8	526-0251	4	Washer, Flat (3/8")
3	123-1616	1	Cup, Oil Pickup	9	800-0052-01	4	Screw, Hex Head Cap (3/8-16 x 1-1/2")
4	123-2092	1	Cap, Oil Fill	10	509-0291	1	O'Ring (1/2" ID) (Spec A-F)
5	504-0164	1	Valve, Drain/Shutoff				
	504-0150	1	Spec A-F Begin Spec G				

Extended Oil Fill Tube

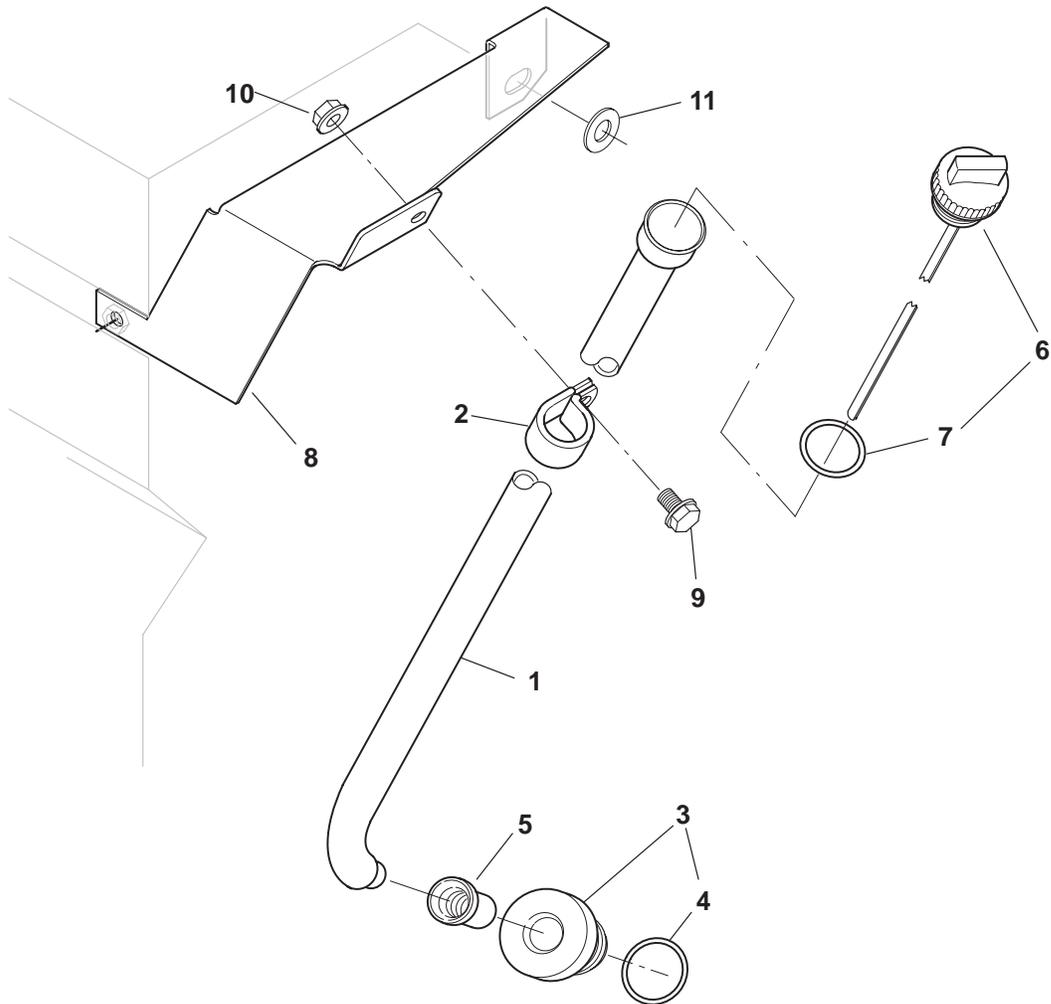


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	123-2041-50	1	Tube, Oil Fill	6	123-2042	1	Indicator Assy (Includes O'Ring)
2	332-3213	1	Clamp, Coated	7	509-0142	1	O'Ring, Indicator
3	123-2039	1	Adapter Assy (Includes Adapter and O'Ring)	8	155-2943-02	1	Bracket, Tube Support
4	509-0246	1	O'Ring, Adapter	9	821-0010	1	Screw (1/4-20 x 1/2")
5	509-0269	1	Seal, Oil Fill Tube	10	870-0212	1	Nut (1/4 x 20)
				11	526-0029	1	Washer, Flat (3/8")

Oil Drain Extension

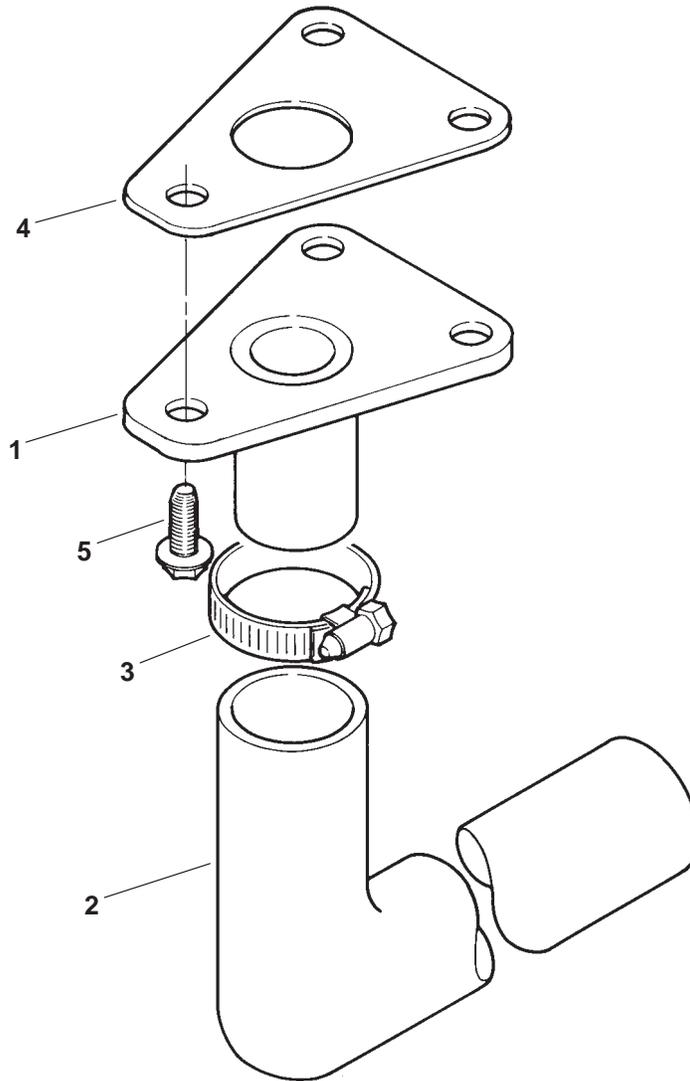


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	102-1394	1	Adapter, Oil Drain	5	815-0261	3	Screw, Hex Washer Head Cap Thread Forming (1/4-20 x 1/2")
2	503-1195	1	Hose, Oil Drain (3/4" ID x 24")				
3	503-0183	1	Clamp, Hose				
4	102-1391	1	Gasket, Oil Drain Adapter				

Exhaust System (Side or Bottom)

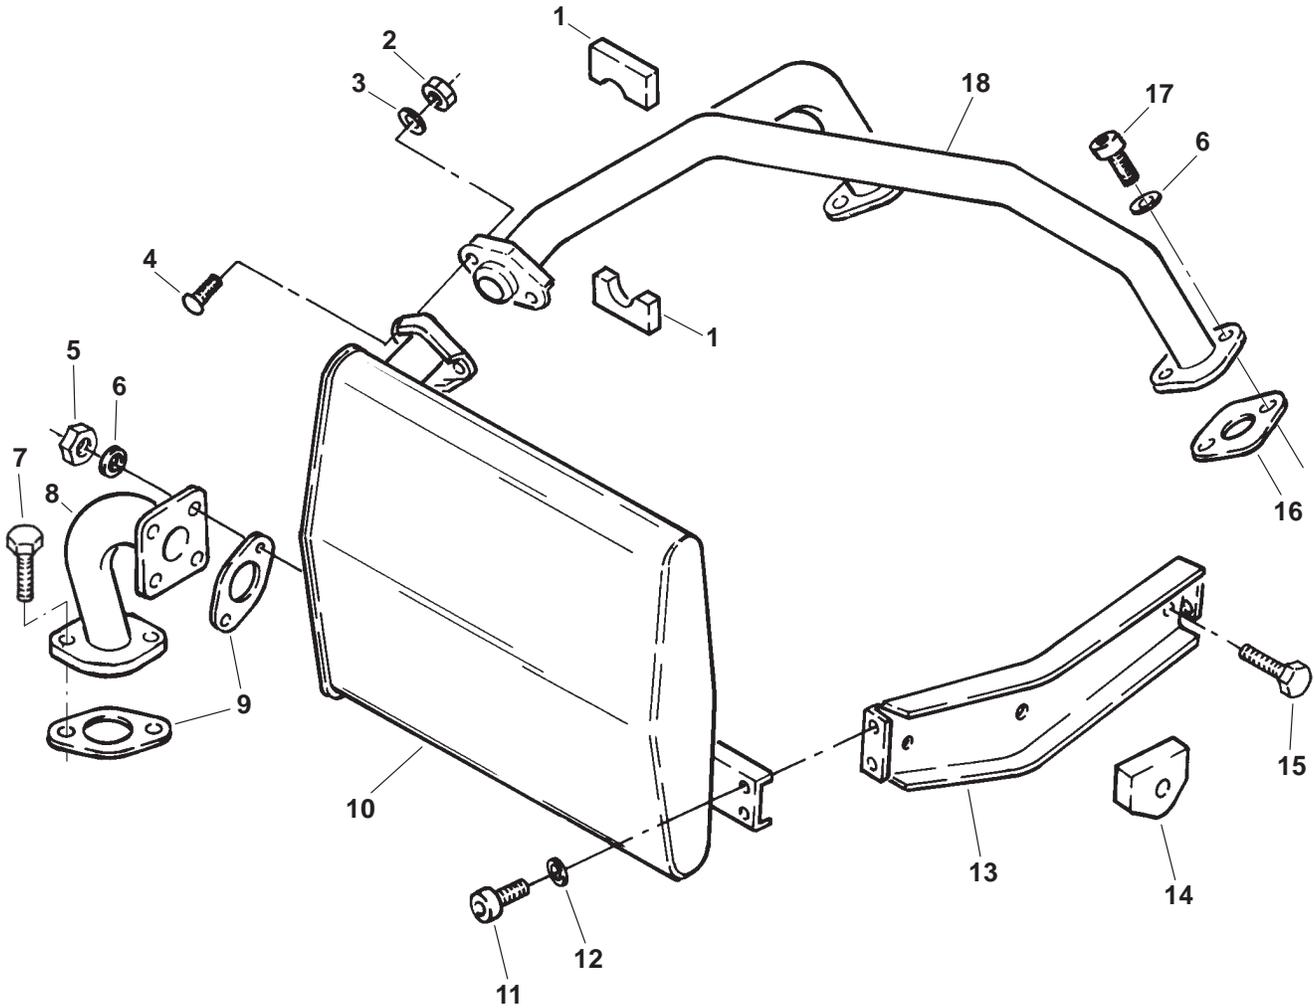

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	134-4770	2	Insulation, Exhaust Tube	11	815-0261	4	Screw, Hex Washer Head Cap Thread Forming (1/4-20 x 1/2")
2	870-0048	2	Nut, Self-Locking (5/16-18)	12	526-0018	4	Washer, Flat (1/4")
3	526-0122	2	Washer, Flat (.34)	13	155-2558	2	Support, Muffler
4	816-0140	2	Bolt, Carriage (5/16-18 x 1-1/4")	14	155-2415	2	Seal, Muffler Support
5	862-0014	2	Nut, Hex (5/16-18) (Stainless Steel)	15			Screw, Hex Flange Head Spec A-F (3/8-16 x 3/4")
6	740-1006	6	Washer, Flat (M8)		821-0029	4	Spec A-F (3/8-16 x 3/4")
7	800-0730	2	Screw, Hex Head Cap (5/16-18 x 1")		815-0890-01	4	Begin Spec G (3/8-16 x 1)
8	155-2428	1	Tube, Exhaust	16	154-2746	2	Gasket, Exhaust Manifold
9	154-2765	2	Gasket, Exhaust Tube	17	802-0053	4	Screw, Socket Head (5/16-18 x 3/4")
10	155-2477	1	Muffler, Exhaust	18	154-2784	1	Manifold, Exhaust

Exhaust Options

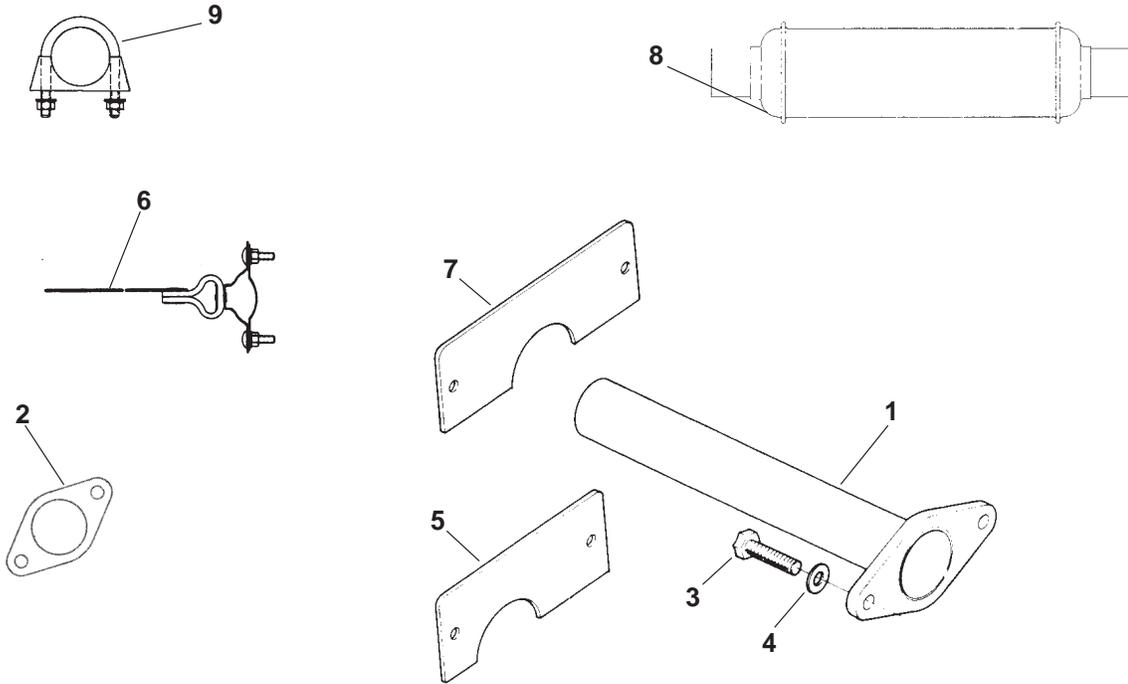


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155-2610	1	Tube, Exhaust 3"	7	155-2401-02	2	Cover, Tailpipe Access 1-1/8"
	155-2424	1	7"	8	155-2449	1	Resonator, Exhaust
2	154-0945	1	Flange, Exhaust Manifold (1/4"Thk) (Steel Plate)	9			Clamp, Exhaust
3	800-0730	2	Screw, Hex Head Cap (5/16-18 x 1")		155-1255	-	1"
4	526-0115	2	Washer, Flat (5/16")		155-1256	-	1-1/8"
5	155-2402	2	Cover, Tailpipe Access		155-1257	-	1-1/4"
6	155-2174	-	Hanger, Exhaust (1-1/2")		155-1015	-	1-3/8"
					155-1239	-	1-1/2"
					155-1135	-	1-5/8"

Drip Pan

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	403-2893-02	1	Pan, Drip	12	856-0008	5	Washer, EIT Lock (5/16")
2	402-0629	1	Bushing, Isolator	13			Screw
3			Screw, Self-Locking Hex Flange Head (1/4-20 x 1/2")		821-0016	1	Self-Locking Hex Flange Head (5/16-18 x 3/4")
	821-0010	7	Spec A-F		815-0236	1	Hex Head Thread Cutting (5/16-18 x 5/8")
	821-0010	9	Begin Spec G				Bracket, Fuel Pump
4	815-0657	4	Screw, Hex Head Cap Thread Forming (3/8-16 x 2-3/4")	14	149-2321-02	1	Spec A-F
			Isolator, Vibration		149-2569-02	1	Begin Spec G
5	402-0624	4	Isolator, Vibration	15	508-0307	3	Grommet, Fuel Pump (Neoprene) (Spec A-F)
6	526-0325	4	Washer, Flat (13/32" ID x 2-29/64" OD x 1/8" Thk)	16	526-0012	3	Washer, Flat (#10)(Spec A-F)
			Screw, Self-Locking Hex Flange Head (1/4-20 x 3/4")	17	850-0030	3	Washer, Lock (#10) (Spec A-F)
7	821-0015	2	Screw, Self-Locking Hex Flange Head (1/4-20 x 3/4")	18			Nut, Hex (#10-32)
			Clip, Fuel Line Retainer		867-0028	1	Spec A-F
8	518-0515	2	Clip, Fuel Line Retainer		870-0131	1	Begin Spec G
9	870-0212	4	Nut, Self-Locking Hex (1/4-20)	19	815-0610	1	Screw, Hex Head Cap Thread Forming (1/4-20 x 1")
10	151-0752	1	Controller, Governor (Begin Spec B)	20	337-2434	1	Strap, Ground
11	815-0783-03	1	Screw, Pan Head Torx (#10-32 x 1/2")	21	134-4745	1	Seal, Air Outlet


Air Housing

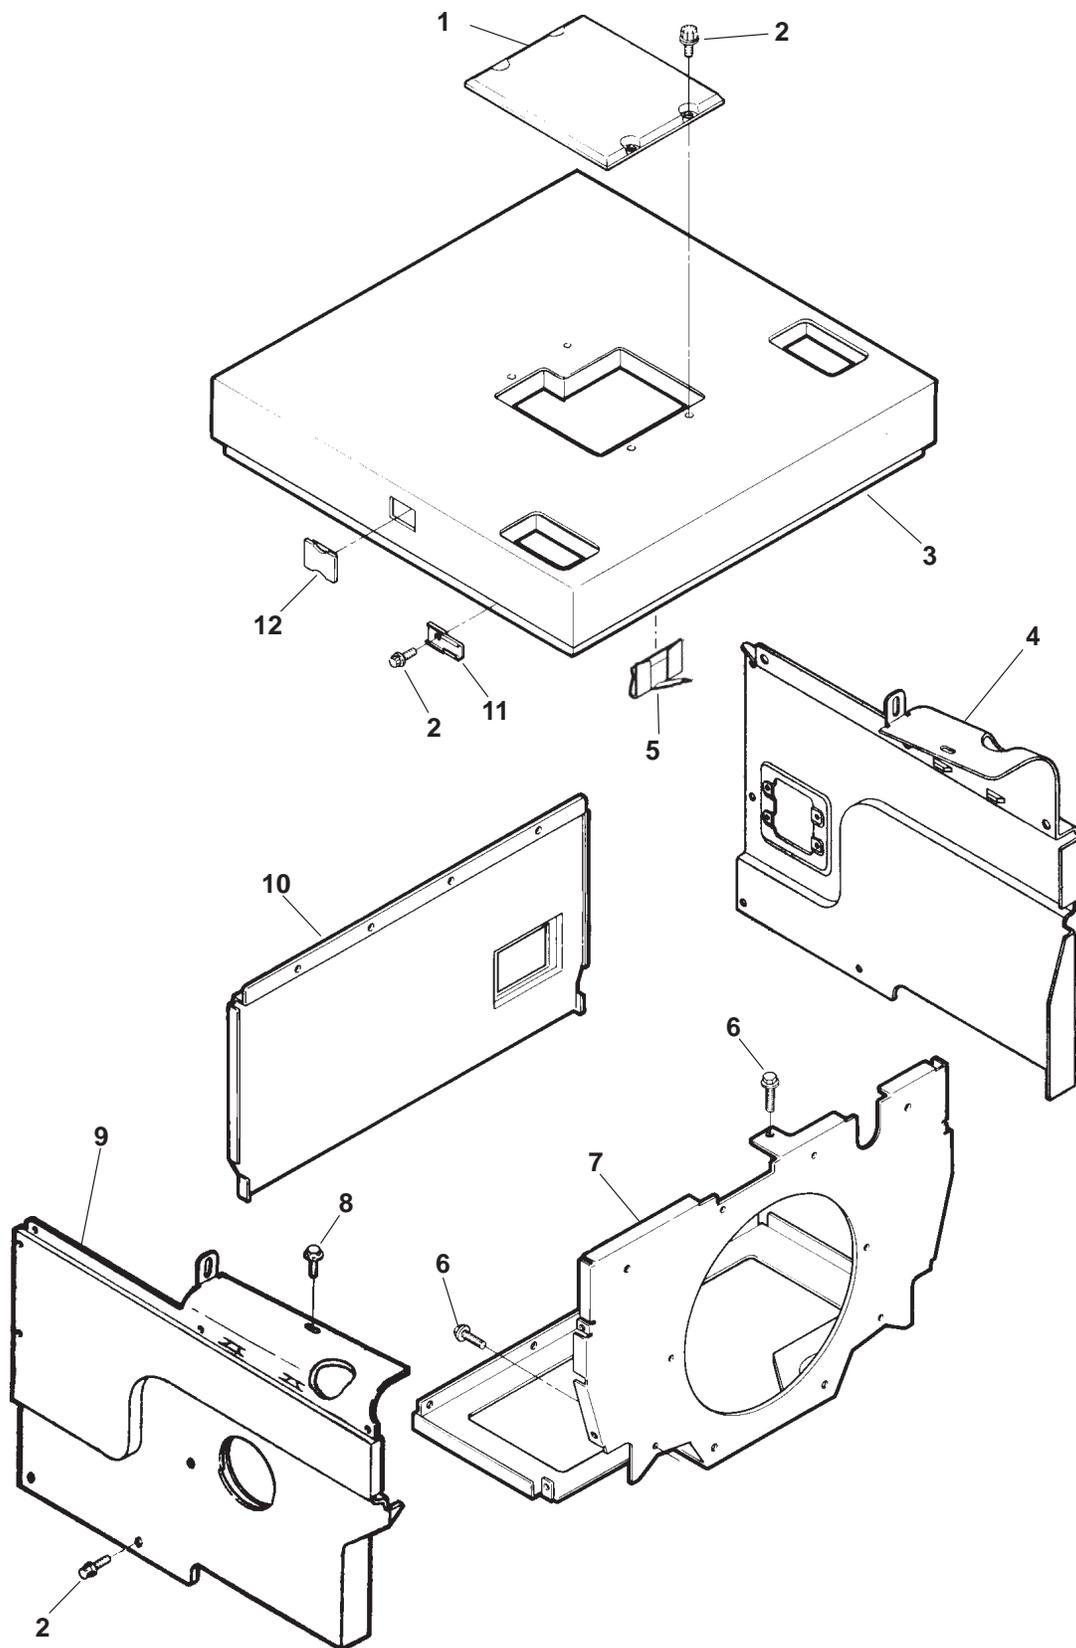

Air Housing


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	134-4753-02	1	Cover, Governor Access	7			Backplate
2	815-0889	31	Screw, Hex Washer Head (1/4-20 x 3/4")		134-4961-50	1	Spec A
3	134-5163		Cover, Top (Includes Insulation and Indented Nut Listed Below)	8	134-4924-50	1	Begin Spec B
	134-5146	1	Insulation, Top	8	821-0014	2	Screw, Self-Locking Hex Washer Head (5/16-18 x 1/2")
	518-0581	3	Nut, Push On	9	134-4939	1	Cover, Right Side Cylinder (Includes Indented Parts Listed Below)
4	134-4890	1	Cover, Left Side Cylinder (Includes Indented Parts Listed Below)		134-5060	1	Insulation, Cylinder Head
	134-5061	1	Insulation, Cylinder Head		870-0468	1	Nut, Flex Lock
	870-0468	1	Nut, Flex Lock		518-0581	5	Nut, Push On
	518-0581	6	Nut, Push On (Round Shaped)		134-4791-50	1	Cover, Cylinder Head Inner
	134-4771-50	1	Cover, Tailpipe Access	10	134-4831	1	Insulation, Muffler Box
	518-0574	4	Clip (1/4-20) Access Cover		134-4888	1	Panel, Front (Includes Insulation and Indented Parts Listed Below)
	815-0815	4	Screw, Torx Drive (1/4-20 x 1/2") Access Cover		134-4771-50	1	Cover, Tailpipe Access Opening
	134-4837	1	Insulation, Muffler Box (Lower)		518-0574	4	Clip (1/4-20) Access Cover
	134-4832	1	Insulation, Muffler Box (Upper)		815-0815	4	Screw, Torx Drive - Access Cover (1/4-20 x 1/2")
	134-4793-50	1	Cover, Cylinder Head Inner		518-0581	5	Nut, Push On
5	518-0618	1	Clip, Spark Plug Wire		134-4997	1	Insulation
6	815-0261	7	Screw, Hex Washer Head Cap Thread Forming (1/4-20 x 1/2")	11	518-0570	9	Clip, Moulding
				12	517-0278	1	Plug, Governor Adjust Access

Underfloor Housing

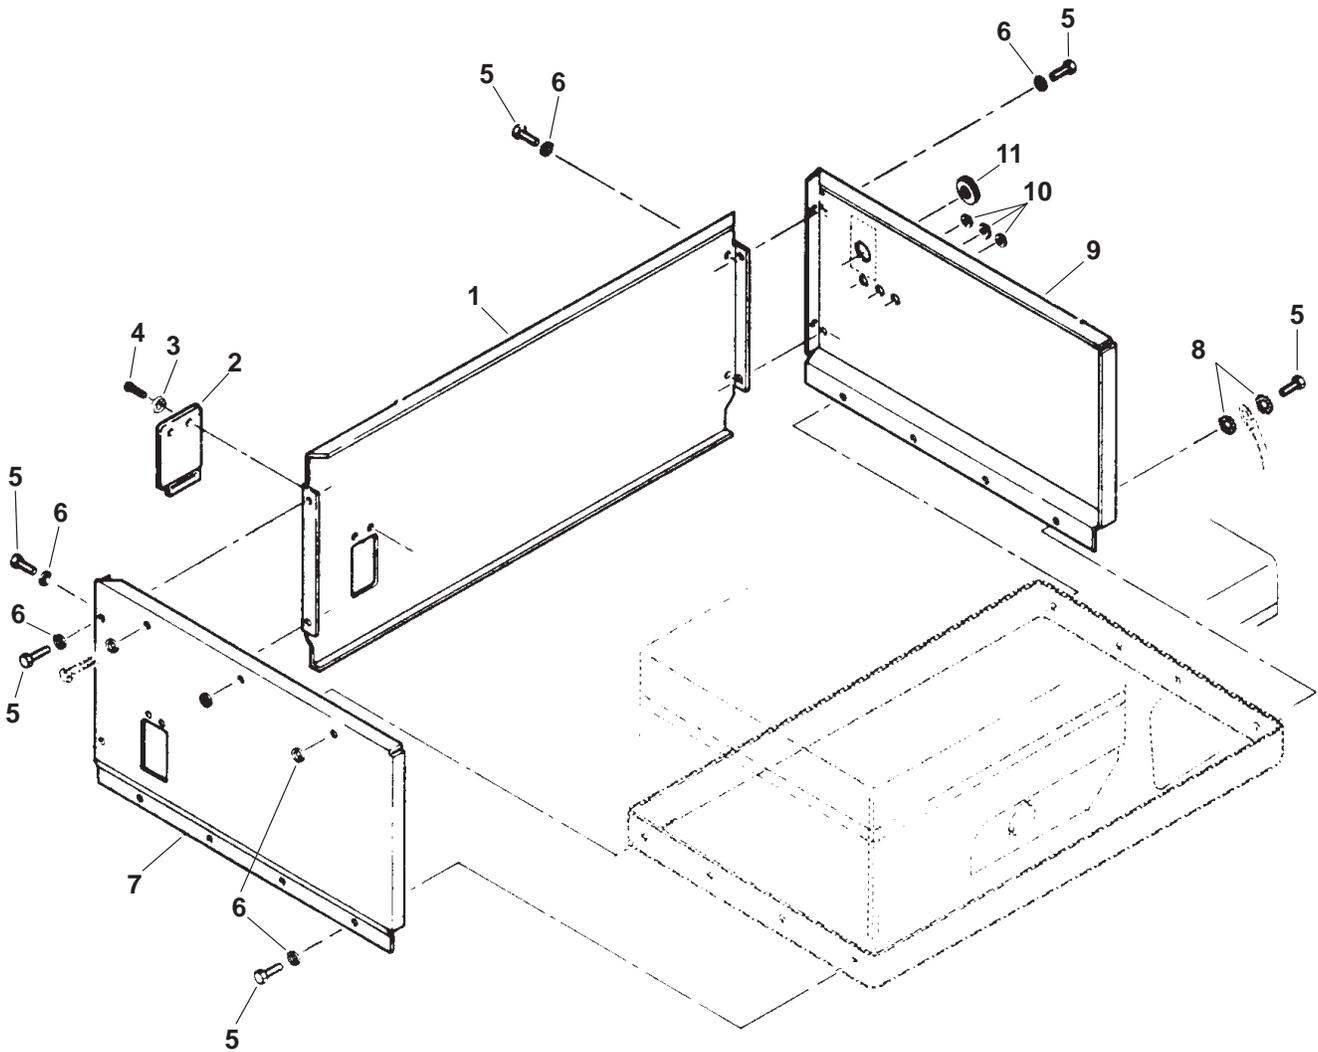


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-4662	1	Panel, Rear (Includes Insulation)	6	526-0122	22	Washer, Flat (5/16")
2	405-4668-01	1	Cover, Panel Rear	7	405-4663	1	Panel, Left Side (Includes Insulation)
3	850-0030	2	Washer, Spring Lock (#10)	8	856-0008	2	Washer, EIT Lock (5/16")
4	813-0098	2	Screw, Round Head Machine (#10-32 x 3/8")	9	405-4237	1	Panel, Right Side (Includes Insulation)
5	800-0026	16	Screw, Hex Head Cap (5/16-18 x 3/4")	10	508-0071	3	Grommet, Rubber (5/8")
				11	508-0055	1	Grommet, Rubber (1-1/2")

Fuel Tank

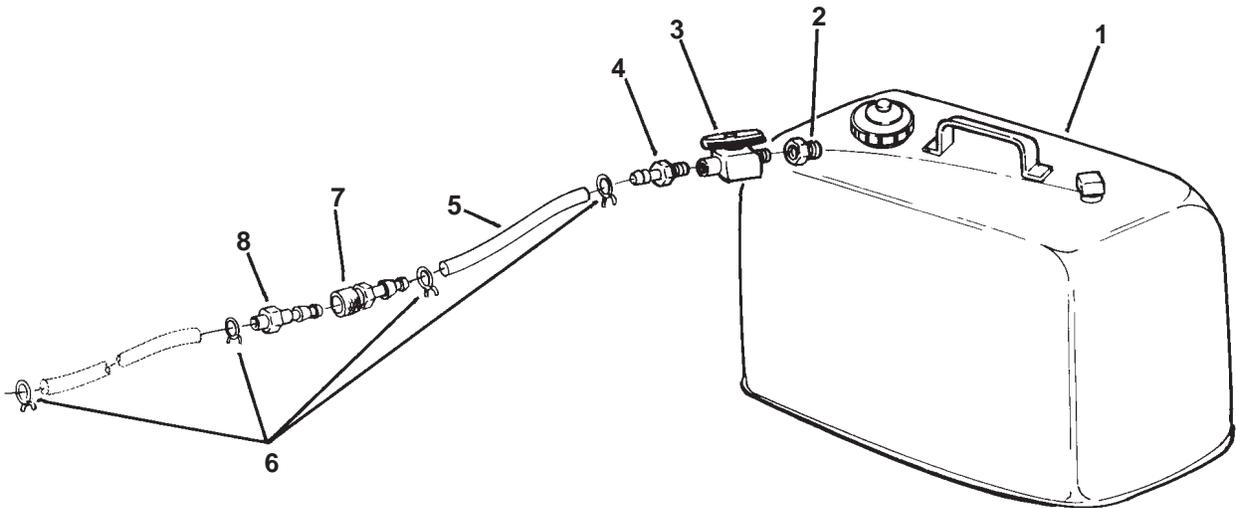

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	415-0511	1	Tank, Fuel (6 Gallon)	6	503-0731	4	Clamp, Hose
2	505-0007	1	Bushing, Reducer (1/4" x 1/8")	7	502-0397	1	Coupling, Quick Disconnect Female
3	504-0169	1	Valve, Shutoff (1/8")	8	502-0398	1	Coupling, Quick Disconnect Male
4	502-0395	1	Connector, Barbed Hose (1/8")				
5	503-0708	1	Hose, Fuel (1/4" ID x 14")				

Generator

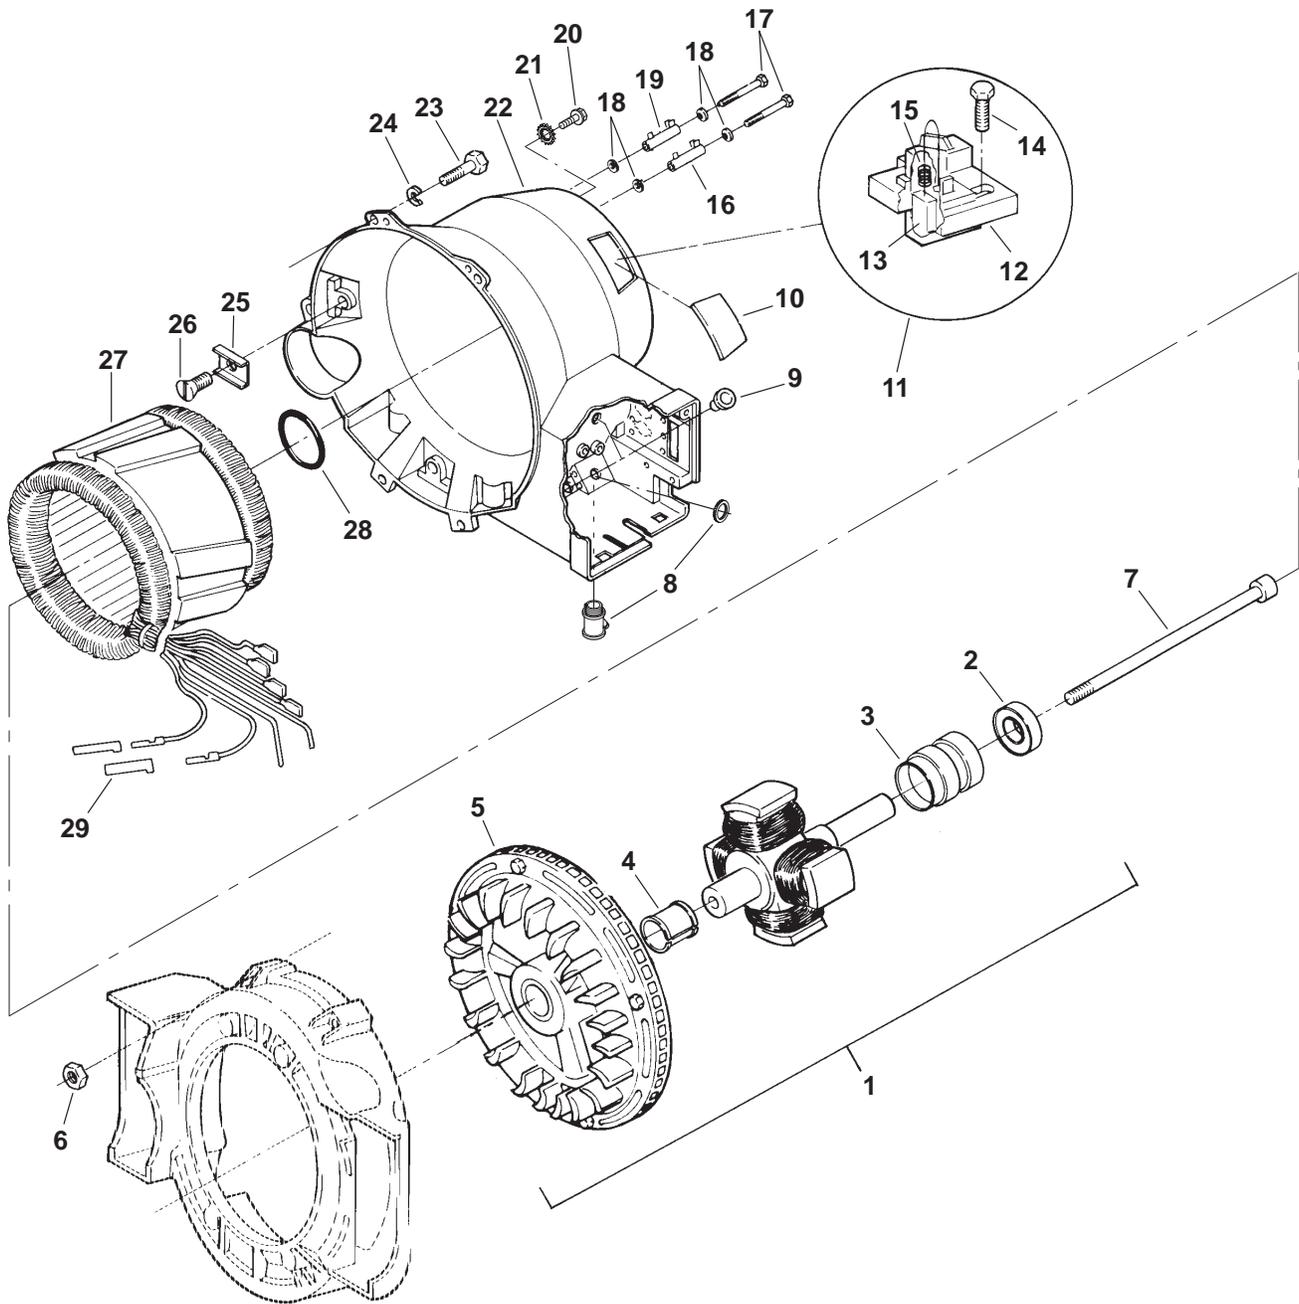


Generator

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Rotor, Generator (Includes Parts Marked *)	18	304-0015	4	Washer, Centering (7/32")
	201-3388-03	1	Spec A,B	19			Resistor, Battery Charge (R1) (Spec A-F)
	201-3509-01	1	Begin Spec C		304-0794	1	25 Watts, 5 Ohms
2	510-0099	1	*Bearing, Ball		304-0818	1	50 Watts, 1.2 Ohms
3	204-0134	1	*Ring, Collector	20	821-0030	1	Screw, Lock Head (3/8-16 x 1")
4	518-0460	1	*Ring, Tolerance	21	856-0010	1	Washer, EIT Lock (3/8")
5	205-0165	1	*Fan, Generator	22			Housing, Generator Stator
6	862-0003	4	Nut, Hex (3/8-16)		220-4438-01	1	Spec A
7	802-1038	1	Screw, Socket Head (7/16-14 x 10-7/32")		220-4532-01	1	Begin Spec B-G
8	331-0536	1	Connector, Conduit (Begin Spec D)	23	800-0052	4	Screw, Hex Head Cap (3/8-16 x 1-1/2")
9	508-0272	2	Grommet, Nylon	24	850-0050	4	Washer, Spring Lock (3/8")
10	212-1284	1	Cover, Brush Block Access	25	232-2955-02	3	Clamp, Stator
11	212-1285	1	Block, Generator Brush (Includes Parts Marked #)	26	815-0290	3	Screw, Hex Washer Head Thread Forming (1/4-20 x 5/8")
12	212-1286	1	#Block, Brush	27	220-4135-04	1	Stator, Generator
13	214-0103	2	#Brush, Generator	28	509-0196	1	O'Ring
14	815-0788	2	Screw, Torx - Pan Head (#10-32 x 7/8")	29	332-0819	2	Housing, Push On Connector
15	212-1276-03	2	#Spring, Generator Brush				
16	304-0810	1	Resistor, Fuel Pump (R7)				
17			Screw, Torx Drive Thread Forming				
	815-0660	2	Hex Head (#10-32 x 2-1/2") Specs A,B				
	815-0808-01	1	Pan Head Shakeproof (#10-32 x 4-1/2") Begin Spec C				

* - Parts Included in Generator Rotor.

- Parts Included in Generator Brush Block

Control

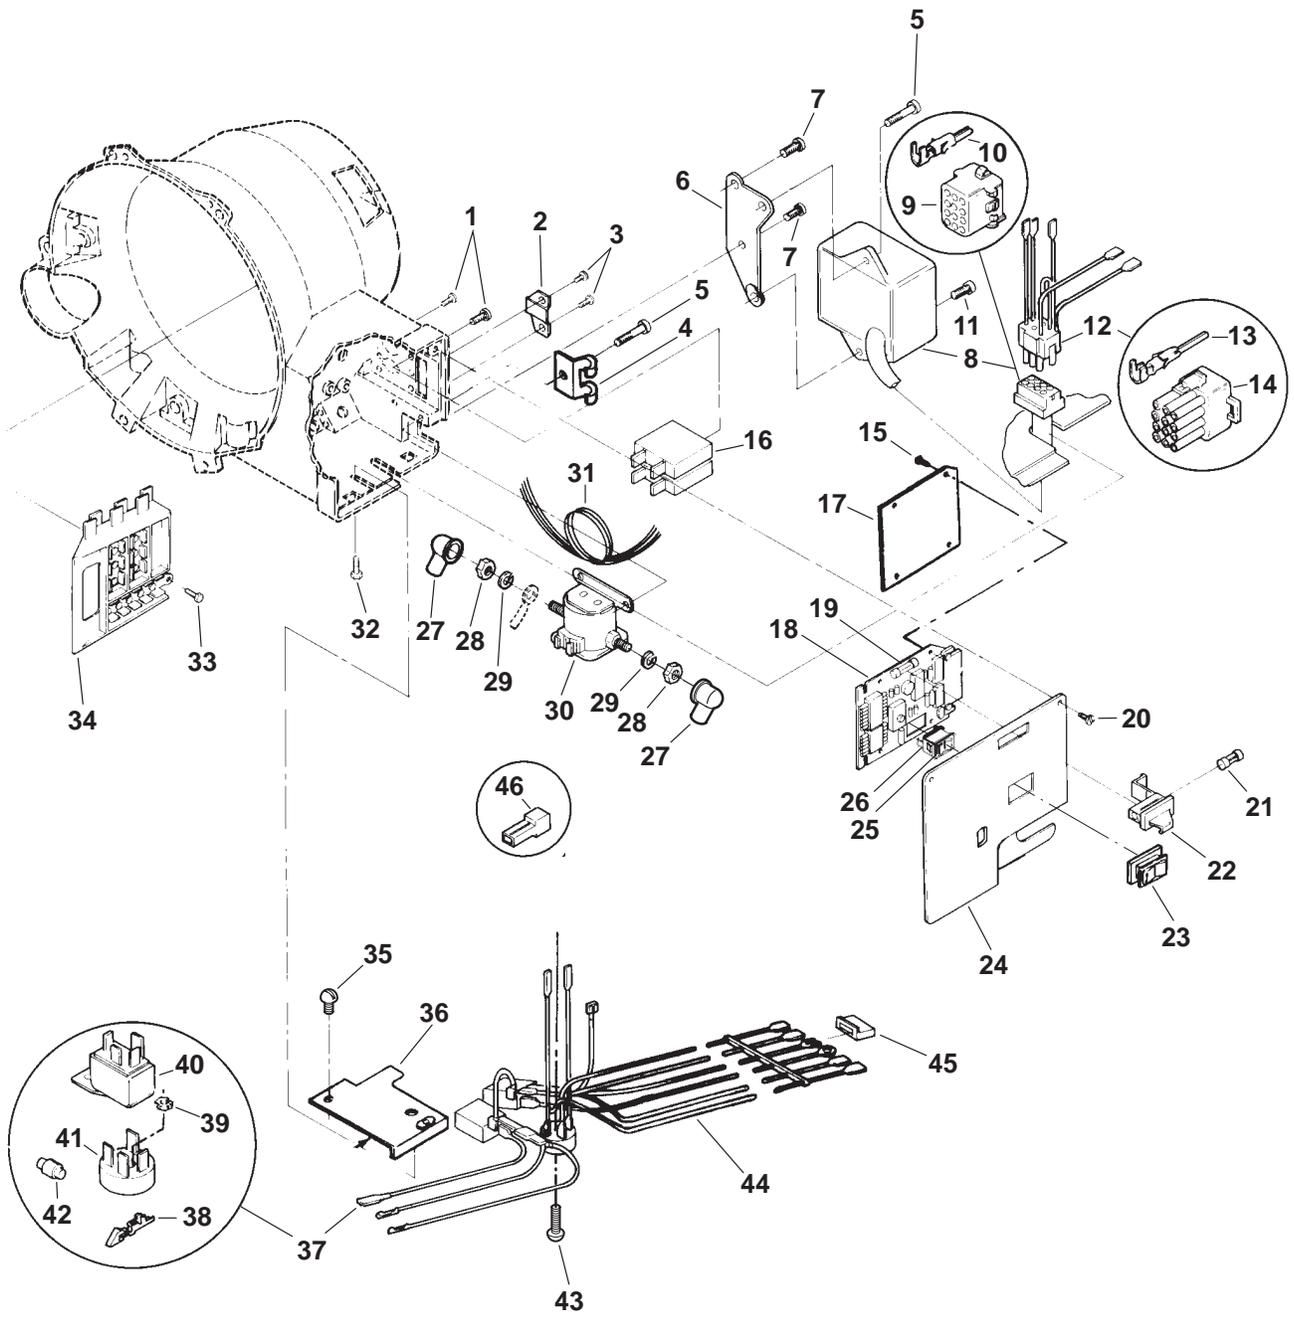


Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	815-0550-01	4	Screw, Pan Head (#6-32 x .312")	23	308-0949	1	Cover, Rubber Switch
2	232-3265-02	1	Clamp, Conduit	24			Cover, Control
3	815-0661	2	Screw, Pan Head Thread Forming (#10-32 x 1/2")		319-0762	1	Spec A
4			Bracket, Fuse Holder		319-1238-01	1	Begin Spec B
	321-0323-02	1	Spec A-F		319-1238-02	1	Spec 26105
	321-0357-02	1	Begin Spec G	25	308-0996	1	Spec 11578
5	815-0692-02	2	Screw, Machine Pan Head Torx Drive (1/4-20 x 1")	26	308-0995	1	°Cover, Hard Plastic Switch
6	305-0825-02	1	Bracket, Voltage Regulator	27	332-2112	2	°Switch, On/Off (A1S1)
7	815-0664	2	Screw, Torx Drive Thread Forming (1/4-20 x 3/8")	28	868-0002	2	Insulator, Terminal
8	305-0826	1	Regulator, Voltage (Includes Cap and Pins) (VR1)	29	850-0045	2	Nut, Jam Hex (5/16-24)
9	323-1315	1	Cap, Connector - 12 Place (P4)	30	307-2570	1	Washer, Spring Lock (5/16")
10	323-1199	12	Pin, Contact	31	338-2058	1	Relay, Start Solenoid (K1)
11	815-0777-01	1	Screw, Torx Drive (1/4-20 x 1/2")	32	815-0803	1	Harness, AC Output
12	338-2476	1	Harness, Voltage Regulator (Includes Socket and Plug)	33	815-0691-01	1	Screw, Torx Pan Head (#10-32 x 1")(Spec A-F)
13	323-1200	7	Socket, Contact				Screw, Pan Head Torx Drive Thread Forming (#10-32 x 3/8")
14	323-1314	1	Plug, Connector - 12 Place (J4)	34	332-2859-02	1	Block, Terminal (TB1)
15	815-0791	4	Screw, Pan Head (#6-32 x 3/8")	35	813-0096	2	Screw, Round Head Machine (#10-32 x 1/4")
16			Breaker, AC Output Circuit (CB1,CB2) Spec 26105	36	307-2695	1	Bracket, Relay
	320-1323	1	30A	37	338-2465	1	Harness, Generator (Includes Parts Marked +)
	320-1683	1	20A	38	323-1440	2	+Pin, Contact
	320-1323	2	Spec 11578 (30A)	39	870-0131	1	Nut, Hex (#10-32)(Spec A-F)
17	332-3075	1	Insulator, PC Board (Begin Spec B)	40	307-1886	2	+Relay, Stop Latch - Fuel Pump (K5, K6)
18			Board, Printed Circuit (Includes Parts Marked °) (A1)	41	305-0718	1	+Rectifier, Bridge - Fuel Pump Power (CR10) (Spec A-F)
	300-3950	1	Spec A	42	357-0067	2	+Rectifier, Stop Latch - Fuel Pump (CR8, CR9)
	300-3764	1	Spec B-F	43	813-0103	1	Screw, Round Head Machine (#10-32 x 3/4")
	300-4902	1	Begin Spec G	44	338-2533	1	Harness, Fuel Pump (F2-2, TB1-L0 to J5, R6)
19	321-0271	1	°Clip, Fuse	45			Housing, Push On Connector Spec A-F
20	815-0661	2	Screw, Pan Head Thread Forming (#10-32 x 1/2")		332-0819	1	Spec A-F
21			Fuse (F1)		332-0556	1	Begin Spec G
	321-0298	1	5 Amp - Spec A	46	323-1298	2	Connector (B1 to H1-1, J1-1 and B2 to H1-2, J1-7)
	321-0146	1	10 Amp - Begin Spec B				
22	321-0295	2	Holder, Fuse (For Spares)				

+ - Parts Included in 338-2465 Wiring Harness.


° - Parts Included in Printed Circuit Board.

Engine Harness Spec A

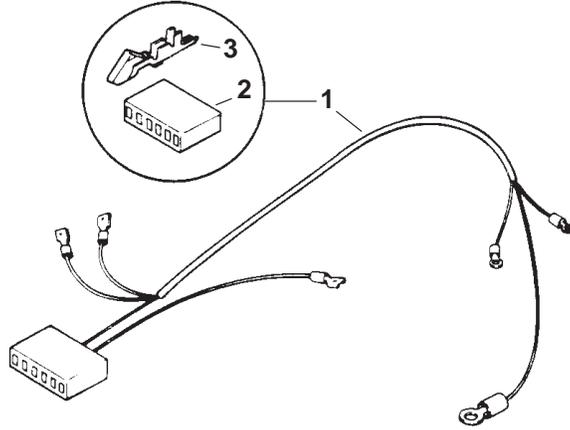


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338-2481	1	Harness, Wiring – Engine to Control (Includes Housing and Contact Pins)
2	323-1329	1	Housing (J3)
3	323-1440	2	Pin, Contact

Engine Harness Begin Spec B

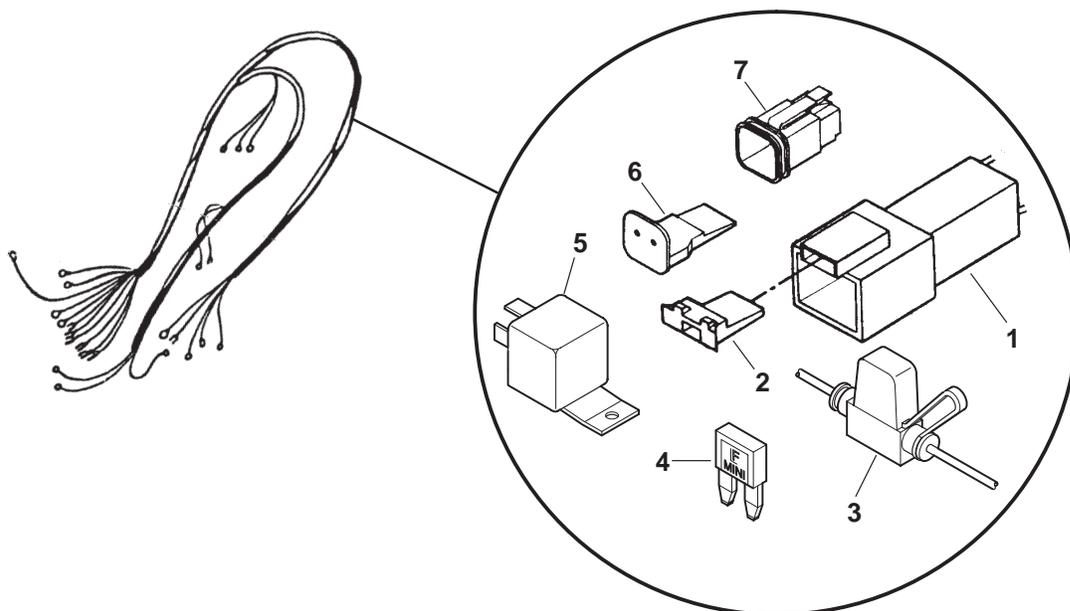

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Harness, Engine Wiring (Includes Connector and Wedge)	2	323-1501	1	Wedge, Receptacle – Use with 323-1505 Connector
	338-2585	1	Spec B	3	321-0322-01	1	Holder, Fuse
	338-2585-01	1	Spec C	4	321-0321-06	1	Fuse (10A)
	338-2888	1	Begin Spec D (Also Includes Fuse Holder, Fuse and Relay)	5	307-1886	1	Relay (K4)
1	323-1505	1	Connector, Receptacle	6	323-1500	1	Wedge, Plug – Use with 323-1505 Connector
				7	323-1504	1	Connector, Plug – Use with 323-1505 Connector


PCB Harness

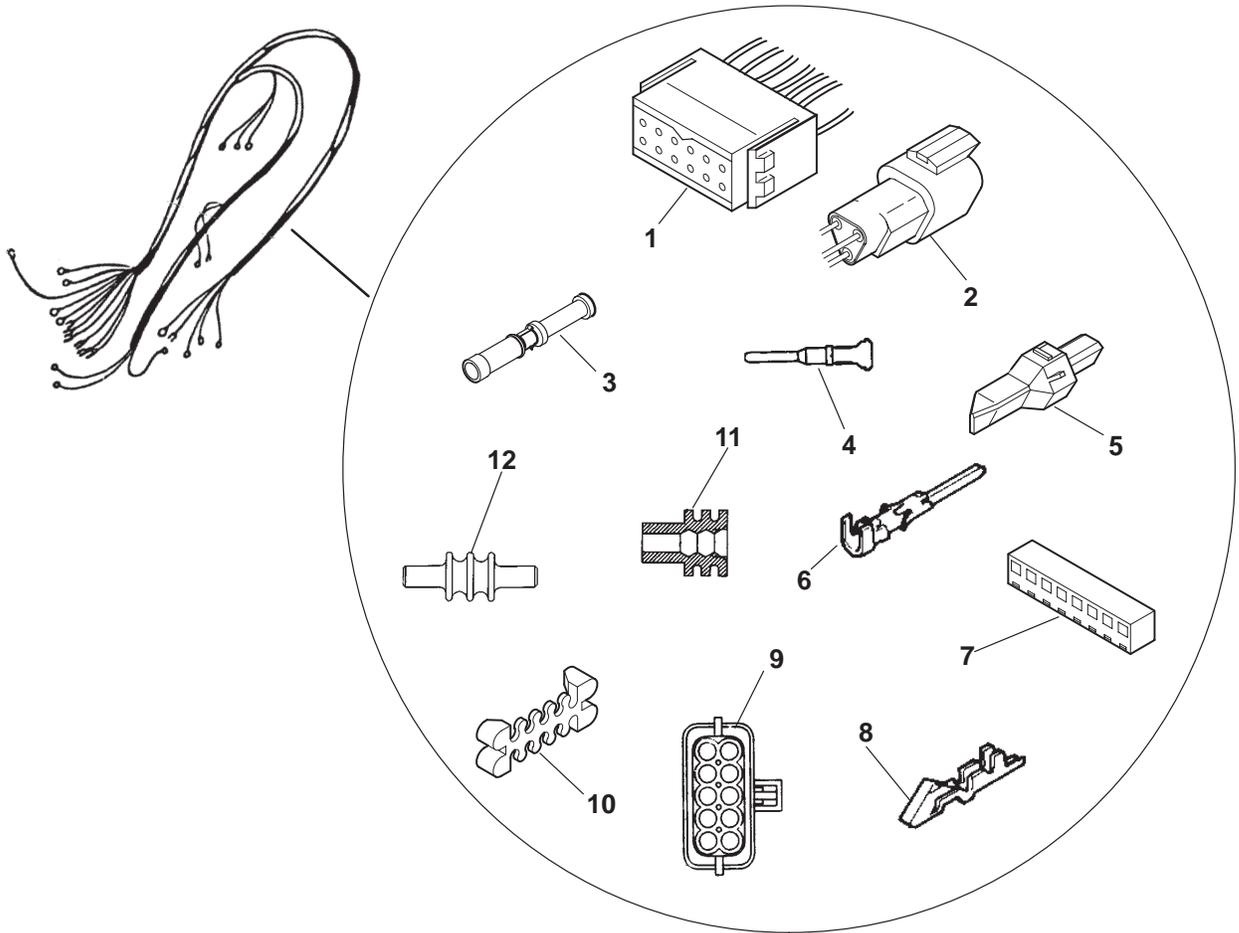

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	338-2040	1	Harness, PCB Spec A (Includes Parts Marked #)	5	323-1502	1	•+Wedge, Receptacle – Use with 323-1494 Connector
	338-2584	1	Spec B (Includes Parts Marked +)	6	323-1200	1	•#+ Socket, Contact
	338-2584-01	1	Spec C (Includes Parts Marked +)	7	323-1312	1	#Housing (J1) (8 Pin)
	338-2887	1	Spec D-F (Includes Parts Marked +)	8	323-1440	5	#Pin, Contact
	338-3478-01	1	Begin Spec G (Includes Parts Marked •)	9	323-1743	1	•Connector, Plug (8 Pin)
1	323-1487-03	1	•+Housing, Connector – 12 Connections	10	323-1741	1	•Housing, Lock
2	323-1494	1	•+Connector, Receptacle	11	323-1708	–	•Seal, Cable
3	323-1486	8	•+Socket, Contact	12	323-1712	3	•Plug, Cavity
4	323-1491	3	•+Terminal, Pin				


– Parts Included in 338-2040 Wiring Harness.
+ – Parts Included in 338-2584, 338-2584-01, and 338-2887 Wiring Harnesses.
• – Parts Included in 338-3478-01 Wiring Harness.

Remote Panel Spec A-F

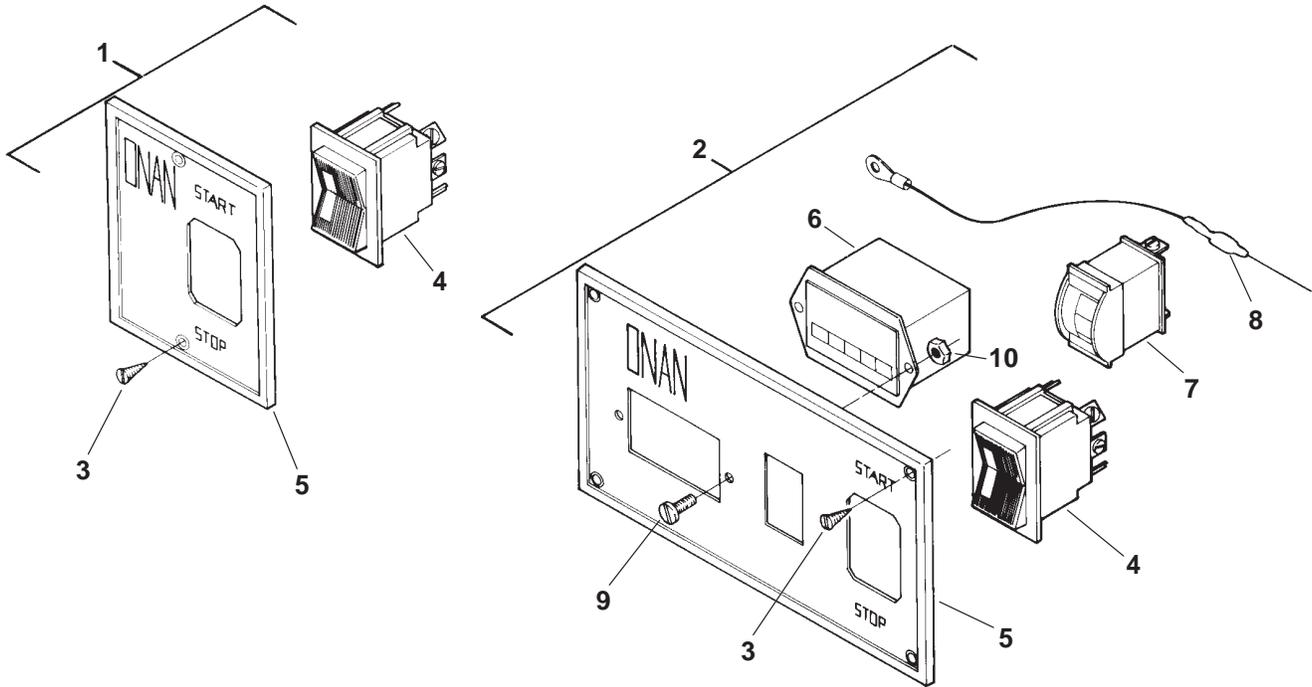

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-2313	1	Kit, Standard Remote Starting Control (Includes Parts Marked *) (A3)	4	308-0341	1	+*Switch, Rocker (S1) Panel, Control
2	300-2314	1	Kit, Deluxe Remote Starting Control (Includes Parts Marked +) (A2)	5	301-3566	1	* Standard Control
3			Screw, Wood Oval Head Cross Recessed (#5 x 1/2")	6	301-3606	1	+ Deluxe Control
	815-0380	2	* Standard Control	7	302-0885	1	+Meter, Time Totalizing (M2)
	815-0380	4	+ Deluxe Control	8	302-0888	1	+Meter, Battery Condition (M1)
				9	359-0034	1	+Diode
				10	815-0385	2	+Screw, Round Head Machine (#6-32 x 1/2")
					860-0006	2	+Nut, Hex (#6-32)

Remote Harness Spec A-F

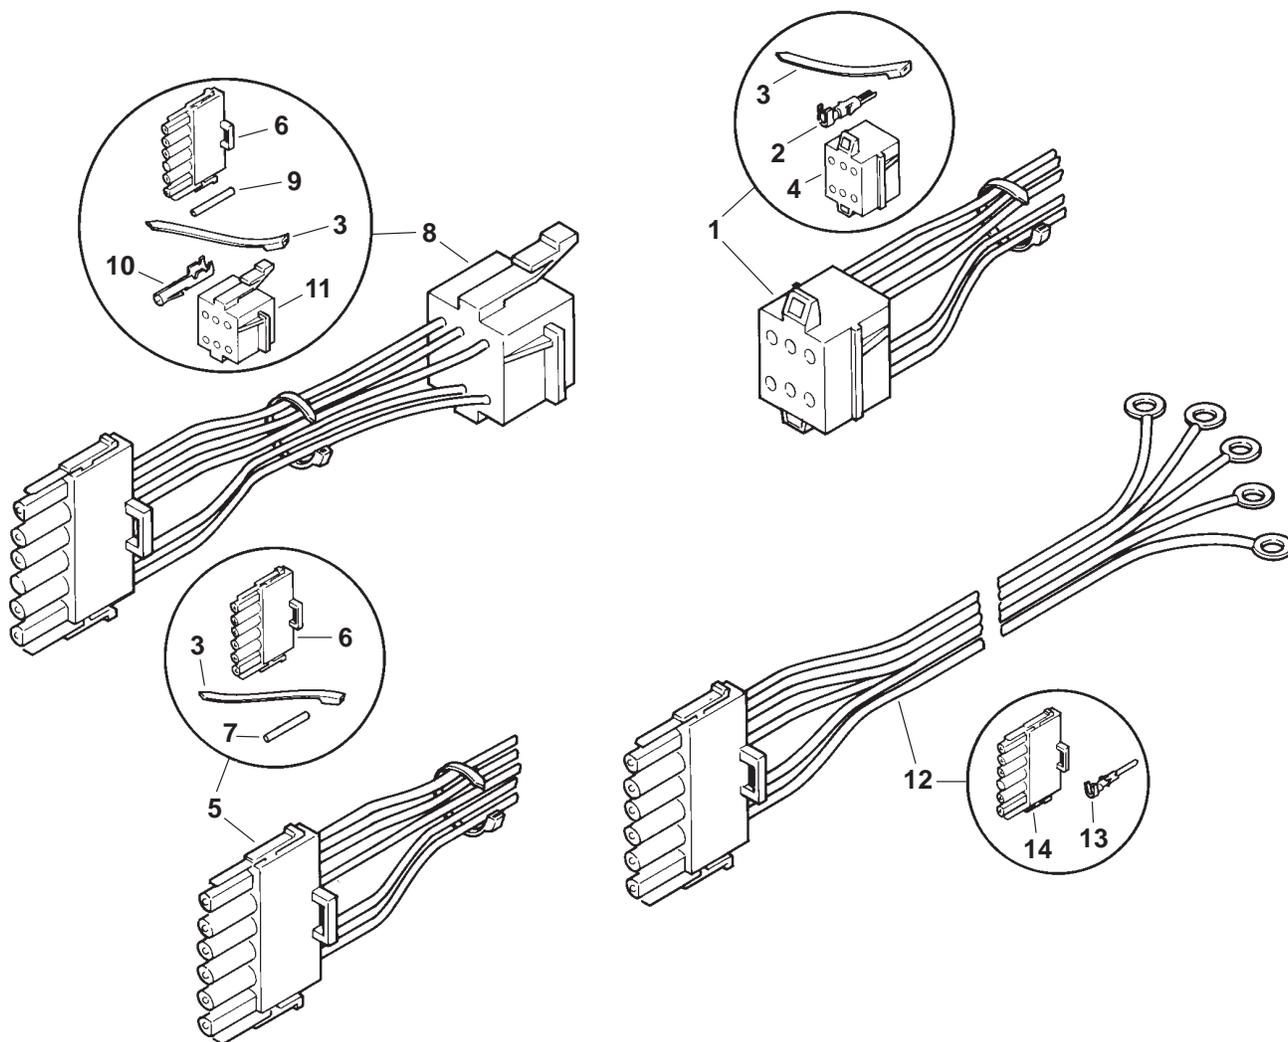


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338-1082	1	Harness, Wiring - 6" (Includes Parts Marked *)
2	323-0500	5	*Pin, Contact
3	332-0941	1	+##Tie, Cable
4	323-0400	1	*Housing, Connector (6 Place)
5	338-2046	1	Harness, Wiring - 6" (Includes Parts Marked #)
6	323-1304	1	+##Housing, Connector (6 Place)
7	323-1199	5	#Pin, Contact
8	338-2137	1	Harness, Wiring - 6" (Includes Parts Marked +)
9	323-1199	5	+Pin, Contact
10	323-0488	5	+Socket, Connector

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
11	323-0440	1	+Housing, Connector (6 Place)
12	338-2260-01	1	Harness, Wiring (Includes Housing and Pins)
	338-2260-02	1	Ten Foot
	338-2260-02	1	Thirty Foot
13	323-1199	5	Pin, Contact
14	323-1304	1	Housing, Connector (6 Place) (J2)


* - Parts Included in 338-1082 Wiring Harness
 # - Parts Included in 338-2046 Wiring Harness
 + - Parts Included in 338-2137 Wiring Harness

Remote Switch Panel Begin Spec G

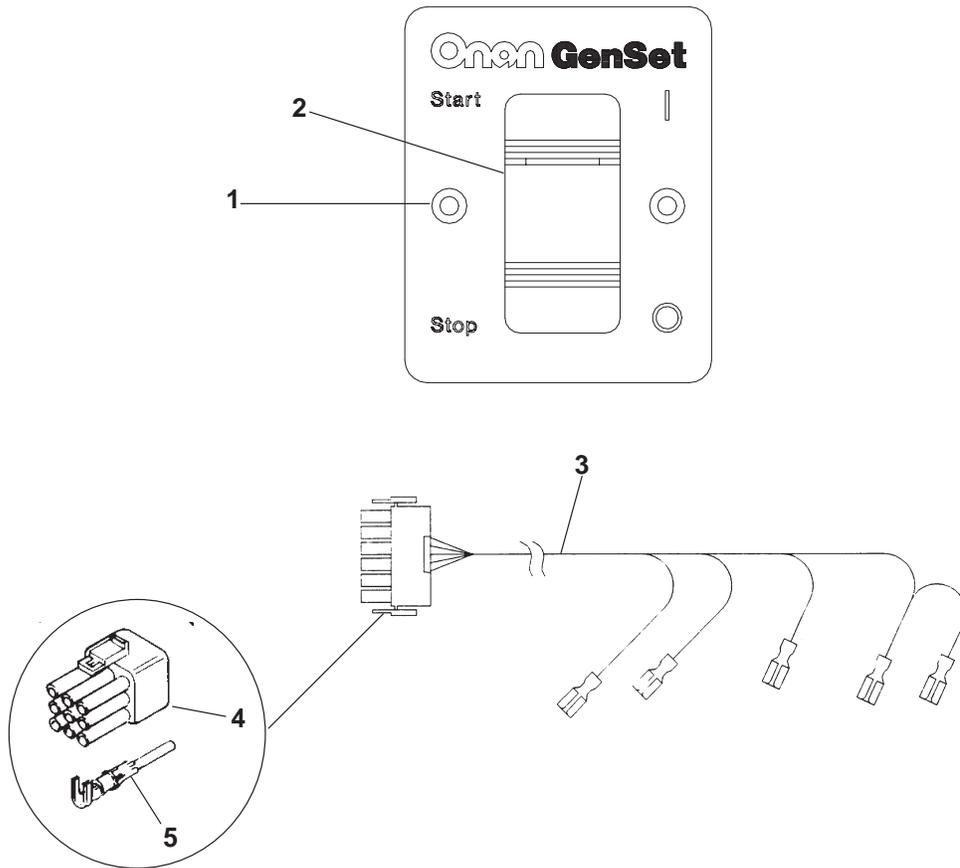



REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	300-4936	1	Kit, Switch Only Remote Panel	4	323-1291	1	Plug (9 Pin)
1	815-0910	2	Screw, Wood Mounting (#6 x 1)	5	323-1199	4	Pin, Contact
2	308-1062	1	Switch, Rocker				
3	338-3510	1	Harness, Remote Panel (Includes Pins and Plug)				

Remote Switch/Hourmeter Panel Begin Spec G

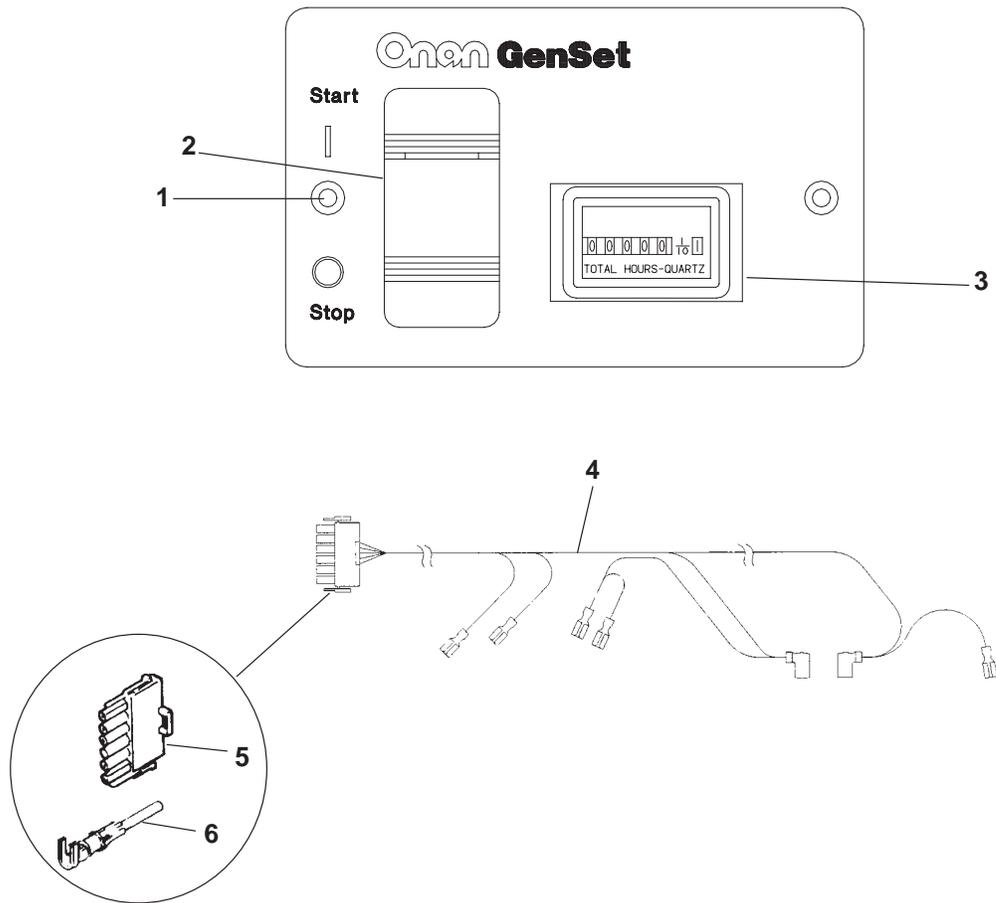


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	300-4937	1	Kit, Switch/Hourmeter Remote Panel	3	302-2002	1	Meter, Hour
1	815-0910	2	Screw, Wood Mounting (#6 x 1)	4	338-3466	1	Harness, Remote Panel (Includes Pins and Plug)
2	308-1062	1	Switch, Rocker	5	323-1304	1	Plug (6 Pin)
				6	323-1199	4	Pin, Contact

Remote Switch/Voltmeter Panel Begin Spec G

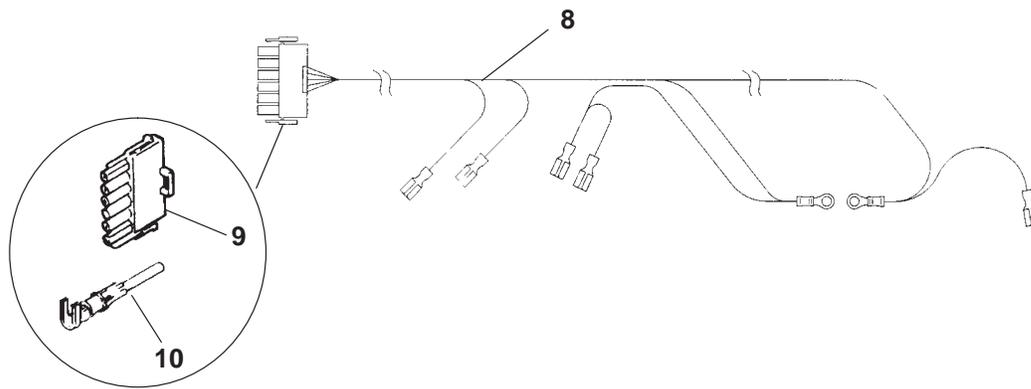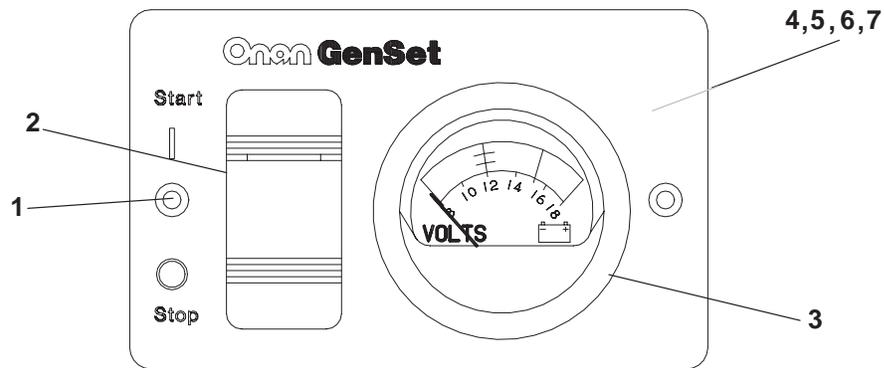

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	300-4938	1	Kit, Switch/Voltmeter	7	850-0030	2	Washer, Lock
1	815-0910	2	Screw, Wood Mounting (#6 x 1)	8	338-3507	1	Harness, Remote Panel (Includes Pins and Plug)
2	308-1062	1	Switch, Rocker	9	323-1304	1	Plug (6 Pin)
3	302-1641	1	Meter, Voltage	10	323-1199	4	Pin, Contact
4	526-0409	2	Washer, Nylon				
5	526-0049	4	Washer, Flat				
6	871-0010	4	Nut, Hex Brass Machine (10-32)				


Remote Harness Begin Spec G

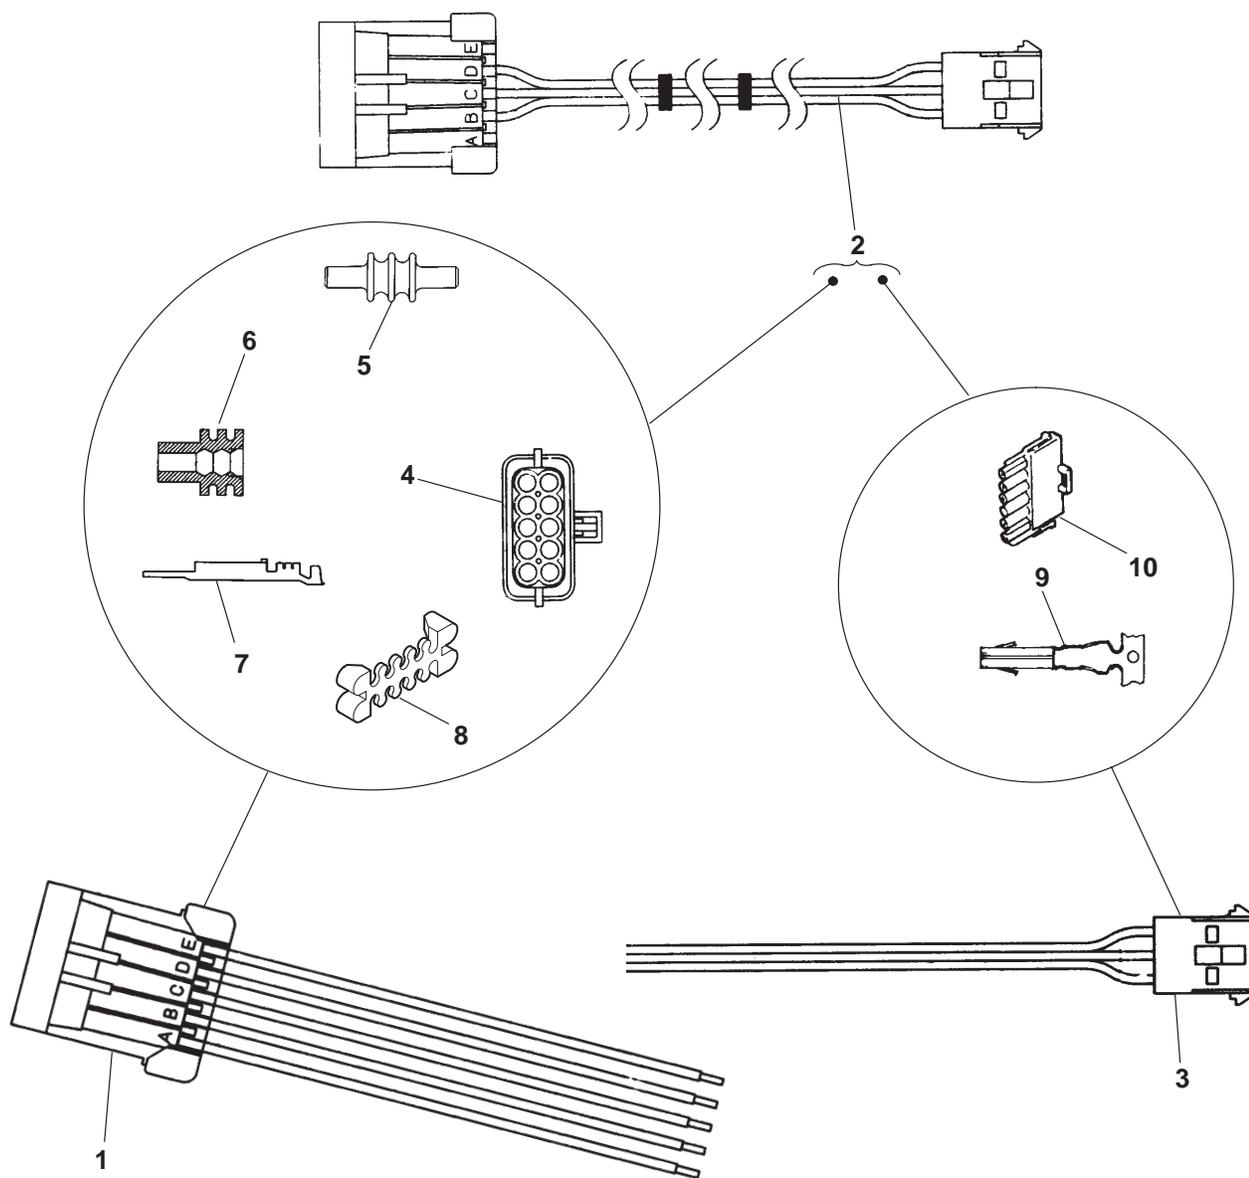

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-4946	1	Harness, Remote (Includes Parts Marked *)	6	323-1708	5	+*Seal, Cable
2			Harness, Remote Panel (Includes Parts Marked +)	7	323-1707	5	*Pin, Contact
	338-3489-01	1	10'	8	323-1741	1	+*Housing, Lock
	338-3489-02	1	30'	9	323-1200	1	+#Socket, Contact
3	338-3572	1	Harness, Adapter (Includes Parts Marked #)	10	323-1342	1	+#Cap, Connector
4	323-1744	1	+*Connector, Receptacle (8 Pin)				
5	323-1712	3	+*Plug, Cavity				

* - Parts Included in Remote Harness (300-4947).
+ - Parts Included in Remote Panel Harness (338-3490).
- Parts Included in Adapter Harness (338-3573).

Adapter Harness

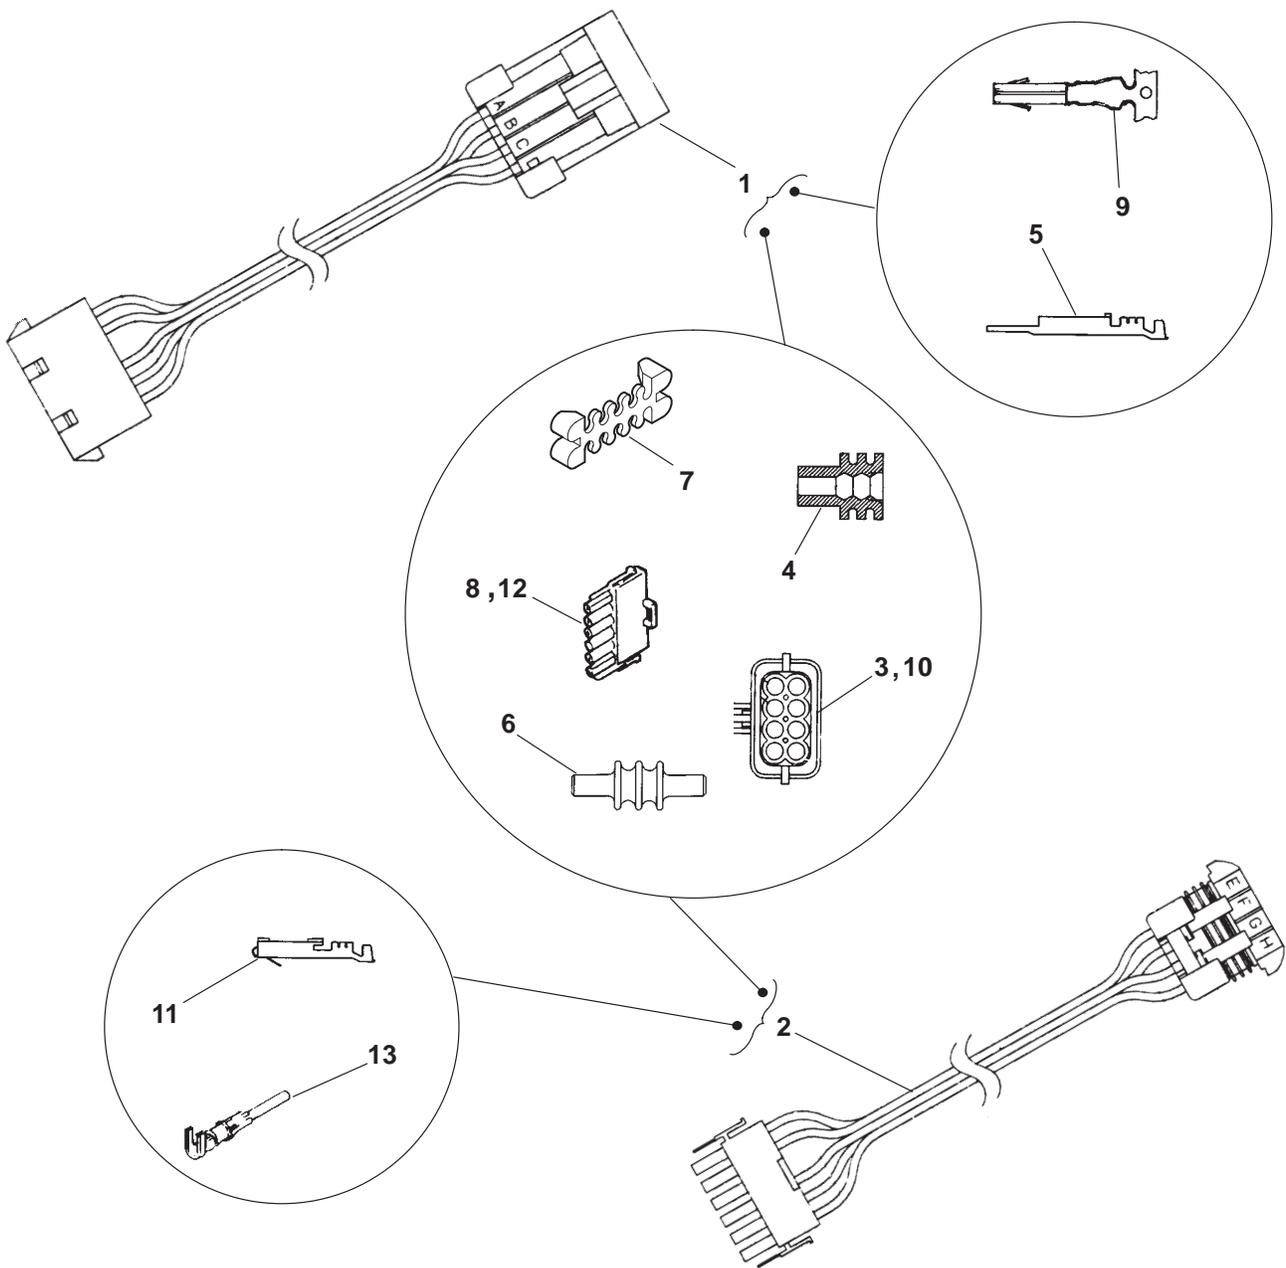

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338-3513		Harness, Adapter Wiring New Set to Old Panel (Includes Parts Marked *)	8	323-1342	1	*Cap, Connector (6 PI)
2	338-3514		Harness, Adapter Wiring Old Set to New Panel (Includes Parts Marked +)	9	323-1200	1	*Socket, Contact
3	323-1744	1	*Connector, Receptacle (8 Pin)	10	323-1743	1	+Connector, Plug (8 Pin)
4	323-1708	5	+*Seal, Cable	11	323-1709	5	+Socket, Terminal
5	323-1707	5	*Pin, Contact	12	323-1304	1	+Cap, Connector (6 PI)
6	323-1712	3	+*Plug, Cavity	13	323-1199	5	+Pin, Contact
7	323-1741	1	+*Housing, Lock				

* - Parts Included in Remote Harness (338-3513).

+ - Parts Included in Remote Panel Harness (338-3514).

Labels, Kits, Paint and Thread Sealant

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
98-6105-02		1	Label, Air Cleaner (Spec A)	98-6074-02		1	Label, Warning – Provide Support
98-6105-03		1	Label, Air Cleaner (Spec A)	98-6088		1	Label, Warning – Fire or Fumes
98-5335		1	Label, Air Cleaner – Begin Spec B	98-6041		1	Label, Warning – Hazardous Voltage, Exhaust Gas
98-6586-02		1	Label, Battery – Negative				Kit, Gasket
98-6566		1	Label, Fuse	168-0189		1	Valve Grind
			Label, Model Identification	168-0192		1	Engine
98-7371-01			5.0kW	120-0161		1	Kit, Oil Pump Gasket
98-7371-05			5.5kW	518-0347		1	Loctite, Bottle (250cc)
			Label, Oil Fill	525-0394		1	Paint, Black – Flat Enamel (16 oz. Pressurized Spray Can)
98-6618-01		1	White Background				Sealant, Thread (50cc Bottle)
98-6618-02		1	Black Background				
98-6388-02		1	Label, Phone Info.				
98-6402-02		1	Label, Warning – Service/Maintenance	518-0452		–	

Wiring Diagram Information

Spec Number _____	A _____	Wiring Diagram Number		
		B/C _____	D/E/F _____	G _____
11578				611-1240
26105		611-1196	611-1219	611-1240

Numerical Index

<u>Part No.</u>	<u>Page</u>						
098-5335, 50		104-0776-01, 7		113-0314-05, 7		134-4793-50, 33	
098-6041, 50		104-1735, 12		113-0314-10, 7		134-4831, 33	
098-6074-02, 50		105-0058, 11		113-0314-20, 7		134-4832, 33	
098-6088, 50		105-0059, 11		113-0314-30, 7		134-4837, 33	
098-6105-02, 50		105-0541, 10, 11		114-0022, 14		134-4888, 33	
098-6105-03, 50		105-0637, 10		114-0392, 9		134-4890, 33	
098-6388-02, 50		105-0677, 11		114-0397, 9		134-4924-50, 33	
098-6402-02, 50		105-0700, 10, 11		114-0397-10, 9		134-4939, 33	
098-6566, 50		110-0197, 7		114-0397-20, 9		134-4961-50, 33	
098-6586-02, 50		110-0197-10, 7		114-0397-30, 9		134-4997, 33	
098-6618-01, 50		110-1824, 7		115-0006, 7		134-5060, 33	
098-6618-02, 50		110-1824-02, 7		115-0006-02, 7		134-5061, 33	
098-7371-01, 50		110-1824-05, 7		115-0006-05, 7		134-5146, 33	
098-7371-05, 50		110-1824-10, 7		120-0140, 7, 19		134-5163, 33	
101-0405, 9		110-1824-25, 7		120-0161, 50		140-1894, 19	
101-0439-01, 7		110-1879-01, 7		120-0398, 7		140-1919-50, 19	
101-0804, 7		110-3181, 7		120-0491, 9		140-2308, 19	
101-0804-02, 7		110-3479, 7		120-1320, 9		140-2379, 19	
101-0804-10, 7		110-3485, 7		122-0345, 19, 21		140-2883-01, 19	
101-0804-20, 7		110-3487, 7		122-0360-55, 23		140-3093, 19	
101-0804-30, 7		110-3508, 7		122-0645, 23		141-0281, 19	
101-0805, 9		110-3509, 7		122-0771, 23		141-0958, 19	
101-0805-02, 9		110-3510, 7		122-0814, 23		145-0561, 19	
101-0805-10, 9		110-3511, 7		123-1173, 7		145-0704, 19	
101-0805-20, 9		110-3515, 7		123-1174, 7		145-0707, 19	
101-0805-30, 9		110-3526, 7		123-1175, 7		146-0449, 20	
101-0809, 7		110-3527, 7		123-1616, 24		146-0450, 20	
102-1359, 24		110-3709, 7		123-1649, 7		146-0453, 20	
102-1387, 24		112-0229, 7		123-1852, 19		146-0455, 19, 20	
102-1391, 26		112-0264, 7		123-1871, 7		146-0457, 20	
102-1394, 26		112-0264-01, 7		123-2039, 25		146-0528, 19, 20	
102-1457-01, 24		112-0264-02, 7		123-2041-50, 25		146-0588, 20	
103-0804, 14		112-0264-03, 7		123-2042, 25		146-0589, 20	
103-0810, 14, 15		112-0264-05, 7		123-2092, 24		146-0592, 20	
103-0813, 15		113-0310, 7		134-4705, 13		146-0664, 19, 20	
104-0032, 12		113-0310-01, 7		134-4745, 31		149-2267, 19	
104-0043, 12		113-0310-02, 7		134-4753-02, 33		149-2279, 19	
104-0170, 13		113-0310-03, 7		134-4770, 28		149-2321-02, 31	
104-0575, 7		113-0310-05, 7		134-4771-50, 33		149-2331-03, 19	
104-0776, 7		113-0314, 7		134-4791-50, 33		149-2341, 19	

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
149-2569-02,	31	155-1239,	29	212-1285,	37	307-2788,	19
150-0075,	10	155-1255,	29	212-1286,	37	308-0341,	43
150-0078,	10	155-1256,	29	214-0103,	37	308-0949,	39
150-0096,	16	155-1257,	29	220-4135-04,	37	308-0995,	39
150-0939,	16	155-2174,	29	220-4438-01,	37	308-0996,	39
150-1187,	14	155-2401-02,	29	220-4532-01,	37	308-1062,	45, 46, 47
150-1519,	10	155-2402,	29	226-3457-01,	21	309-0322,	23
150-1520,	10	155-2415,	28	231-0381-01,	27	309-0615,	23
150-1612,	16	155-2424,	29	232-2955-02,	37	312-0256,	27
150-1957,	16	155-2428,	28	232-3265-02,	39	319-0762,	39
150-1998,	14	155-2449,	29	300-2313,	43	319-1238-01,	39
150-2002-04,	14	155-2477,	28	300-2314,	43	319-1238-02,	39
150-2294,	16	155-2558,	28	300-3764,	39	320-1323,	39
150-2295,	16	155-2610,	29	300-3950,	39	320-1683,	39
150-2298-01,	16	155-2943-02,	25	300-4902,	39	321-0146,	39
150-2300,	14	160-1345-01,	7	300-4936,	45	321-0271,	39
150-2424,	17	160-1368,	7	300-4937,	46	321-0295,	39
150-2425,	17	166-0747,	27	300-4938,	47	321-0298,	39
150-2426,	17	166-0761,	27	300-4946,	48	321-0321-06,	41
151-0701,	17	166-0770,	27	300-4947,	48, 49	321-0322-01,	41
151-0752,	31	166-0771,	27	301-3566,	43	321-0323-02,	39
153-0554,	19	166-0789-01,	27	301-3606,	43	321-0357-02,	39
153-0555,	19	166-0793,	27	302-0885,	43	323-0400,	44
153-0556,	19	166-0820,	27	302-0888,	43	323-0440,	44
153-0557,	19	166-0821,	27	302-1641,	47	323-0488,	44
153-0558,	19	166-0842,	27	302-2002,	46	323-0500,	44
153-0561,	19	167-0272,	27	304-0015,	22, 37	323-1199,	39, 44, 45, 46, 47, 49
153-0577,	19	167-1625-01,	27	304-0772,	22	323-1200,	39, 42, 48, 49
153-0578,	19	167-1625-02,	27	304-0773,	22	323-1291,	45
153-0579,	19	168-0189,	50	304-0794,	37	323-1298,	39
153-0614,	19	168-0192,	50	304-0810,	37	323-1304,	44, 46, 47, 49
154-0945,	29	191-2158,	21	304-0818,	22, 37	323-1312,	42
154-2447,	19	191-2186,	21	305-0718,	39	323-1314,	39
154-2495,	19	191-2187,	21	305-0825-02,	39	323-1315,	39
154-2746,	28	201-3388-03,	37	305-0826,	39	323-1329,	40
154-2765,	28	201-3509-01,	37	307-1279,	19	323-1342,	48, 49
154-2784,	28	204-0134,	37	307-1886,	39, 41	323-1440,	39, 40, 42
154-3026,	19	205-0165,	37	307-2570,	39	323-1486,	42
155-1015,	29	212-1276-03,	37	307-2695,	39	323-1487-03,	42
155-1135,	29	212-1284,	37	307-2756,	19		

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
323-1491, 42		338-2887, 42		503-1252-01, 19		518-0014, 12	
323-1494, 42		338-2888, 41		503-1351, 19		518-0311, 7	
323-1500, 41		338-3466, 46		503-2041, 19		518-0347, 50	
323-1501, 41		338-3478-01, 42		504-0150, 24		518-0387, 19	
323-1502, 42		338-3489-01, 48		504-0164, 24		518-0450, 19	
323-1504, 41		338-3489-02, 48		504-0169, 35		518-0452, 50	
323-1505, 41		338-3490, 48, 49		505-0007, 35		518-0459, 19	
323-1707, 48, 49		338-3507, 47		508-0055, 34		518-0460, 37	
323-1708, 42, 48, 49		338-3510, 45		508-0071, 34		518-0466, 19	
323-1709, 49		338-3513, 49		508-0272, 37		518-0515, 31	
323-1712, 42, 48, 49		338-3514, 49		508-0307, 31		518-0570, 33	
323-1741, 42, 48, 49		338-3572, 48		508-0321, 22		518-0574, 33	
323-1743, 42, 49		338-3573, 48		509-0008, 14		518-0581, 33	
323-1744, 48, 49		357-0067, 39		509-0040, 14, 15		518-0582, 16	
331-0536, 37		359-0034, 43		509-0041, 7		518-0618, 33	
332-0556, 39		402-0624, 31		509-0142, 25		525-0394, 50	
332-0819, 37, 39		402-0629, 31		509-0196, 37		526-0002, 19	
332-0941, 44		403-2893-02, 31		509-0246, 24, 25		526-0012, 31	
332-2112, 39		405-4237, 34		509-0247, 24		526-0017, 13	
332-2859-02, 39		405-4662, 34		509-0269, 25		526-0018, 7, 28	
332-3075, 39		405-4663, 34		509-0289, 7		526-0021, 19	
332-3198, 27		405-4668-01, 34		509-0291, 24		526-0029, 25	
332-3213, 25		415-0511, 35		509-0313, 19		526-0047, 19	
337-2434, 31		501-0550, 19		510-0013, 14		526-0049, 47	
337-2435, 21		502-0020, 19		510-0014, 14		526-0063, 7	
338-1082, 44		502-0028, 19		510-0015, 10		526-0065, 14, 15, 23	
338-2040, 42		502-0054, 19		510-0099, 37		526-0066, 7	
338-2046, 44		502-0313, 19		515-0001, 10, 11, 12		526-0115, 19, 29	
338-2058, 39		502-0395, 19, 35		515-0263, 13		526-0122, 7, 28, 34	
338-2137, 44		502-0397, 35		516-0051, 15		526-0251, 24	
338-2260-01, 44		502-0398, 35		516-0072, 7		526-0325, 31	
338-2260-02, 44		502-1105, 19		516-0130, 14		526-0356, 13	
338-2465, 39		502-1107, 19		516-0141, 9, 15		526-0402, 7	
338-2476, 39		502-1108, 19		517-0048-01, 7		526-0409, 47	
338-2481, 40		503-0183, 19, 26		517-0067, 9		740-1004, 7, 9	
338-2533, 39		503-0708, 35		517-0223, 19		740-1006, 19, 28	
338-2584, 42		503-0731, 19, 35		517-0278, 33		800-0004, 7	
338-2584-01, 42		503-0813, 19		517-0293, 15		800-0007, 9	
338-2585, 41		503-1133, 19		517-0320, 19		800-0009, 7	
338-2585-01, 41		503-1195, 26		518-0006, 16		800-0017, 19	

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
800-0026,	34	815-0692-02,	39	870-0302,	9		
800-0028-01,	23	815-0770,	22, 27	870-0328,	14, 27		
800-0032-01,	15	815-0777-01,	39	870-0421,	19		
800-0033,	19	815-0783-01,	17	870-0468,	33		
800-0051,	7	815-0783-02,	17	870-0533,	9		
800-0052,	21, 37	815-0783-03,	31	871-0006,	19		
800-0052-01,	24	815-0788,	37	871-0010,	47		
800-0545,	15	815-0791,	39				
800-0571,	7	815-0803,	39				
800-0575,	7	815-0808-01,	37				
800-0575-01,	27	815-0815,	33				
800-0592,	14	815-0889,	33				
800-0730,	28, 29	815-0890-01,	28				
801-0049,	7	815-0910,	45, 46, 47				
802-0053,	28	816-0140,	28				
802-1038,	37	821-0010,	25, 31				
803-0071,	7	821-0014,	33				
813-0096,	39	821-0015,	31				
813-0098,	34	821-0016,	31				
813-0103,	39	821-0029,	28				
815-0046,	14	821-0030,	37				
815-0236,	31	850-0030,	31, 34, 47				
815-0261,	22, 26, 28, 33	850-0040,	21				
815-0290,	27, 37	850-0045,	39				
815-0340,	23	850-0050,	7, 21, 37				
815-0380,	43	851-0031,	14				
815-0385,	43	854-0006,	19				
815-0550-01,	39	856-0008,	31, 34				
815-0583,	22	856-0010,	37				
815-0587,	19	860-0006,	43				
815-0590,	19	862-0001,	21				
815-0591,	19	862-0003,	21, 37				
815-0592,	19	862-0014,	28				
815-0610,	31	862-0015,	19				
815-0650,	27	867-0028,	31				
815-0657,	31	868-0002,	39				
815-0660,	37	870-0048,	28				
815-0661,	39	870-0131,	16, 19, 31, 39				
815-0664,	39	870-0196,	22				
815-0691-01,	39	870-0212,	25, 31				



Onan Corporation
1400 73rd Avenue N.E.
Minneapolis, MN 55432
1-800-888-ONAN
612-574-5000 International Use
Telex: 275477
Fax: 612-574-8087

Onan is a registered trademark of Onan Corporation