



1217 E. 7th Street
Mishawaka, IN 46544
Phone: 1-800-334-4712
1-888-339-2539
Fax: 574-256-6743

T.I.P. Troubleshooting Information on Power Gear

FUSE REPLACEMENT

Fuse replacement for semi-automatic control box.

NOTE : THIS IS FOR R.V.'S MANUFACTURED 1995 TILL 2000.

XF1 = Front jack solenoid fuse 3.15 AMP. (F)
XF2 = Right rear jack solenoid fuse 3.15 AMP. (CR)
XF3 = Left rear jack solenoid fuse 3.15 AMP. (RR)
XF4 = Dump solenoid fuse 3.15 AMP.
XF5 = Power unit motor starter solenoid fuse 1.6 AMP
XF6 = Auxiliary output fuse 1.6 AMP.
XF7 = Auxiliary output fuse 1.6 AMP.

REMOVE: To remove fuse, use needle nose pliers and pull fuse straight out

INSTALL: To install fuse use needle nose pliers to insert the fuse making sure pins on fuse enter receptacle correctly

