


# Self-Leveling System: Quick Reference Guide



2851 Prairie S.W.  
Grandville, MI 49418  
616.530.1717

4600 Wyland Drive  
Elkhart, IN 46516  
574.293.5669

WWW.HADLEY-PRODUCTS.COM

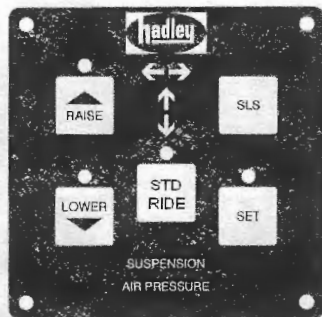

Mode	Function	Indicators
Raise	Press once to raise rear of vehicle for increased ground clearance (speed < 20mph)	Raise light flashes
	Press and hold until raise light remains "on" to raise entire vehicle (speed<10mph)	Raise light "on" continuously
Lower	Press once to partially lower entire vehicle (speed < 20mph)	Lower light flashes
	Press and hold until lower light remains "on" to lower entire vehicle to lowest possible height (speed<5 mph)	Lower light "on" continuously
STD Ride (or) Storing Hydraulic Jacks	Press once to return vehicle to "standard ride" height and cancel any active manual mode	Std Ride light flashes while system is returning to standard ride height. Std Ride light "on" steady (only for 15 seconds) when vehicle reaches standard ride height
Fault	Flashes a 2 or 3 digit error code	Suspension Light

## CAUTION:

Ensure air suspension is inflated prior to moving vehicle after storing leveling jacks.  
STD RIDE light will flash while suspension is inflating and will illuminate solid when air suspension is inflated.

Consult self leveling system manual for proper operation

**FAILURE TO DO SO MAY CAUSE DAMAGE TO VEHICLE**


# Self-Leveling System: Quick Reference Guide



2851 Prairie S.W.  
Grandville, MI 49418  
616.530.1717

4600 Wyland Drive  
Elkhart, IN 46516  
574.293.5669

WWW.HADLEY-PRODUCTS.COM

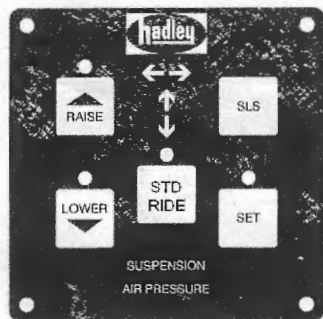

Mode	Function	Indicators
SLS	Press once to activate the SLS system and initiate the "Level Find Mode"	Level indicator arrows for X (long) and Y (short) axis: <i>Solid Green</i> : vehicle is near level. <i>Flashing Green</i> : Adjustment possible and within range. <i>Flashing Amber</i> : Marginal conditions, possible self-level. <i>Solid Amber</i> : Excessive slope, self-leveling may not be possible.
	Press once again to turn "OFF" the SLS system	Level indicator arrows OFF
SET	Press once to activate the "self-leveling" process (vehicle must be stopped and park brake applied)	Set light flashes as the system levels. Set light ON solid after leveling process is complete
	Press once again to turn "OFF" "Self Leveling"	Set light OFF
Fault	Flashes when low system pressure	Air Pressure Light

## CAUTION:

Ensure air suspension is inflated prior to moving vehicle after storing leveling jacks.  
STD RIDE light will flash while suspension is inflating and will illuminate solid when air suspension is inflated.

Consult self leveling system manual for proper operation

***FAILURE TO DO SO MAY CAUSE DAMAGE TO VEHICLE***