Fuse/Relay Location	Fuse Amp Rating	Protected Components
R4	—	Starter relay
R5	—	Blower motor relay
R6	—	Powertrain control module relay
Diode 1	—	Fuel pump diode
Diode 2	—	A/C clutch diode
* Mini Fuses ** Maxi Fuses		

Diode and Relay Module

The module box is located by the power distribution box in front of the radiator in the engine compartment.

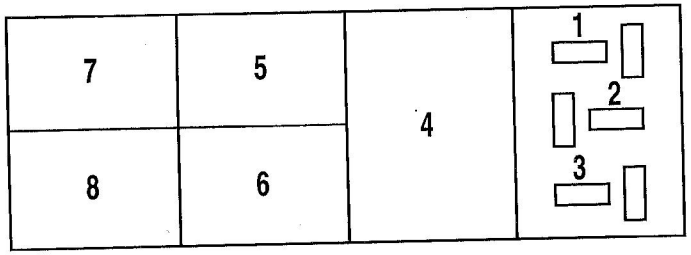

The components are coded as follows:

Relay Location	Description
1	One touch integrated start (ATO diode)
2	Not used
3	Not used
4	Daytime running lamps power relay
5	Hydromax – brake on/off signal isolating relay
6	Reverse lamps relay
7	Starter ground relay
8	Trailer tow parking lamps relay

Fuse Holder Module

The fuse holder module is located next to the diode/relay module.

Fuse Location	Fuse Amp Rating	Protected Circuits
1	10A	Hydromax – brake on/off signal

Passenger Compartment Fuse Panel

The fuse panel is located below and to the left of the steering wheel by the brake pedal. Remove the panel cover to access the fuses.
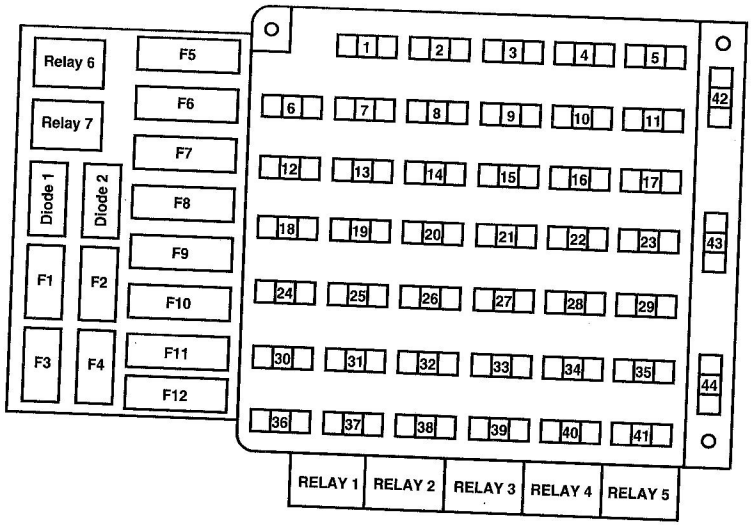
To remove a fuse use the fuse puller tool provided on the fuse panel cover.