

Unified Tow Brake Controller Brake Signal (Orange Wire) Installation
Instructions for Late Model Roadmaster Motorhome Chassis (Pre-2006)

(Monaco, Holiday Rambler, Beaver, Safari)

for negative switched brake light switches

Location of negative switched brake signal:

Wire # 102 – Brake Signal: All have Monaco Box #1 & 2 (or 2a) in the left front electrical box.

Models: Simba RD, Cheetah (after 2003), Santiam, Diplomat, Endeavor, Knight, Ambassador, Windsor, Imperial, Gazelle, Diplomat SE, Camelot, Scepter


OR

Wire #113 – Brake Signal: All Have Monaco Box #3 in the left front electrical box.

Models: Baron, LaPalma Diesel, Vacationer Diesel, Cayman, Neptune, some early Knight & Ambassador models identifiable by their having Monaco Box #3 in the left front electrical box.

(Orange wire may need to be extended to electrical center located in front compartment on driver side.)

You will need one each Universal Relay rated for 10-15 amps with 4 terminals (#30, #85, #86, #87)

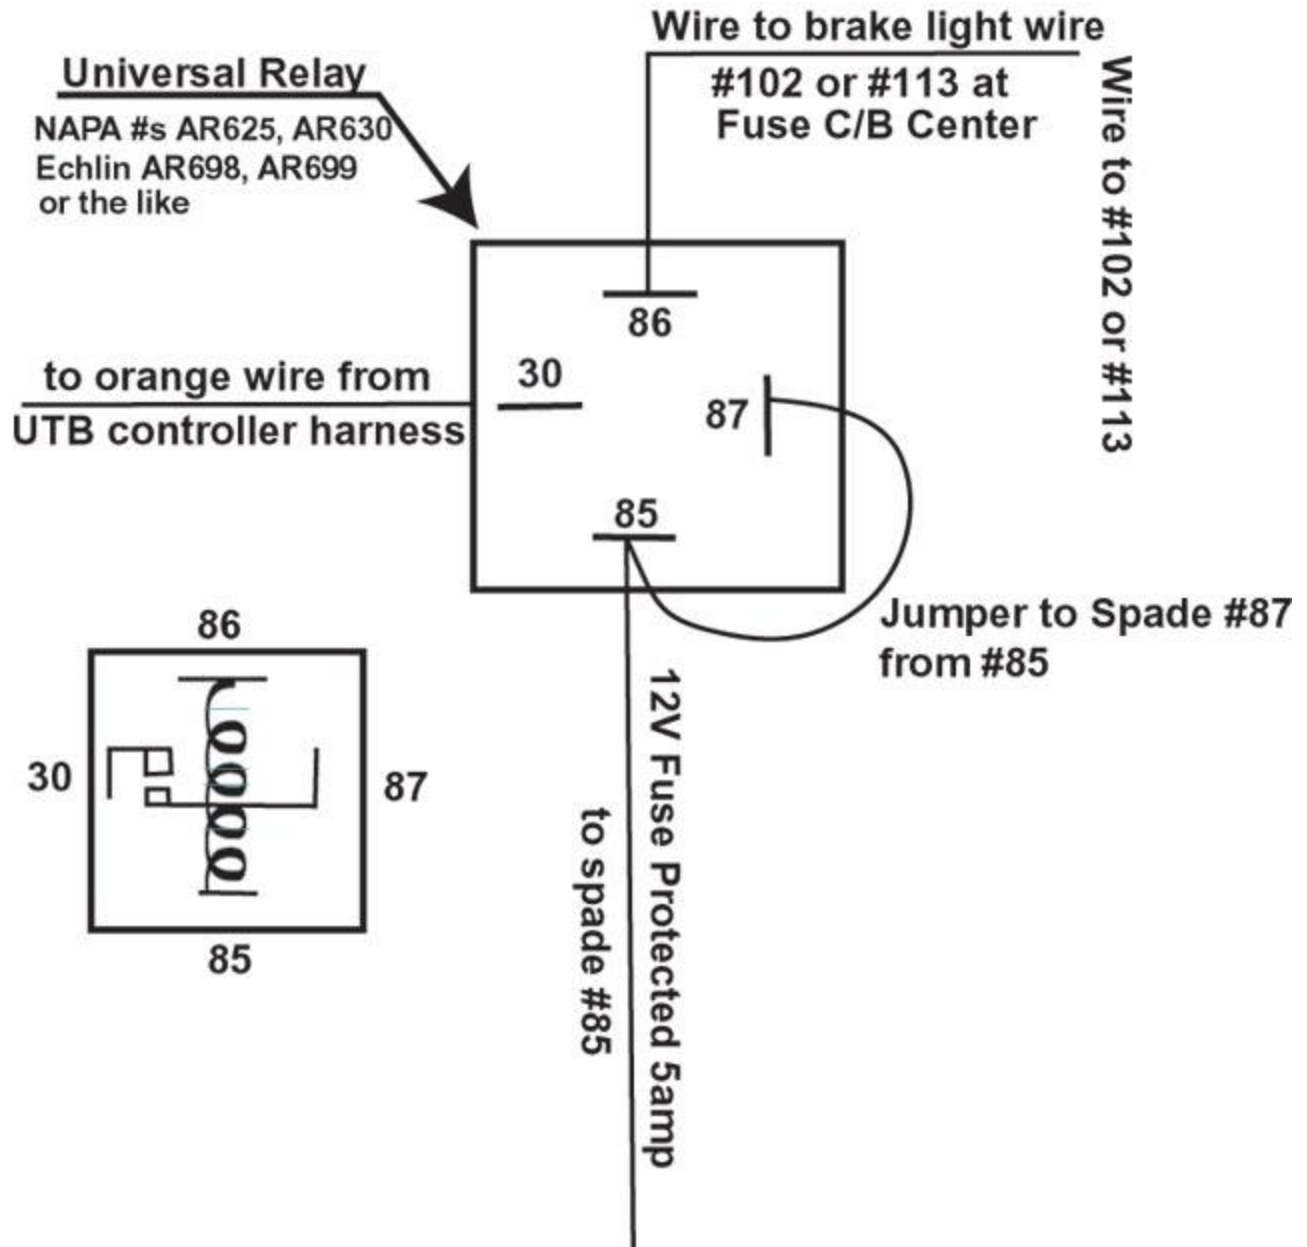

These photos represent negative switched brake location on models listed under "Wire # 102".

Location for models listed under "Wire # 113" is in Monaco box #3 in the left front electrical box.



Monaco Box #2
Wire #102 is in bottom right harness



Attach wire to #102